

## TORQUE SPECIFICATION

Part Tightened	N·m	kgf·cm	ft·lbf
Throttle position sensor x Throttle body assy	2.0	20	17 in.·lbf
ISC valve x Throttle body assy	3.4	35	30 in.·lbf
Throttle body assy x Intake manifold	30	306	22
Transmission oil filler tube sub-assy (A/T TRANSAXLE) x Transaxle housing	5.5	56	49 in.·lbf
Oil cooler tube clamp No. 2 x Transmission oil filler tube sub-assy (A/T TRANSAXLE)	5.5	56	49 in.·lbf
Accelerator control cable assy x Accelerator control cable bracket	13	133	10
Air cleaner case sub-assy x Air cleaner bracket	7.8	80	69 in.·lbf
Air cleaner inlet No.2 x Body	7.5	76	66 in.·lbf
Knock sensor x Cylinder block sub-assy	44	450	32
Intake manifold x Cylinder head sub-assy (See page 10-14)	30	306	22
Cylinder head cover No. 2 x Cylinder head cover sub-assy (See page 10-14)	7.0	71	62 in.·lbf
ECM X A/C unit	3.0	31	27 in.·lbf