

TORQUE SPECIFICATION

Part Tightened		N-m	kgf-cm	ft-lbf
Transmission control cable assy × Body		5.0	51	44 in. lbf
Floor shift shift lever assy × Floor		12	122	9
Wire harness clamp × Manual transaxle		5.0	51	44 in. lbf
Ground cable × Engine mounting bracket LH		26	260	19
Air cleaner bracket × Manual transaxle		19	195	14
Clutch release cylinder × Flexible hose tube		15	155	11
Engine hanger No.1 × Engine		40	408	29
Front suspension member reinforcement set bolt		47	479	35
Front suspension crossmember × body	Bolt A	70	714	52
	Bolt B	116	1,183	86
Engine mounting bracket LH × Manual transaxle		64	653	47
Engine mounting bracket RR × Manual transaxle	Bolt A	49	500	36
	Bolt B	18	180	13
Engine mounting insulator LH × Engine mounting bracket LH		49	500	36
Engine mounting insulator RR × Engine mounting bracket RR		64	653	47
Starter assy × Manual transaxle		37	380	27
Starter assy × Starter wire		9.8	100	87 in. lbf
Manual transaxle × Engine		33	340	24
Filler plug × Manual transaxle		39	400	29
Drain plug × Manual transaxle		39	400	29
Bearing lock plate × Front transaxle case		11	115	8.3
Oil receiver pipe No.1 × Manual transmission case		17	175	13
Oil receiver pipe No.2 × Manual transmission case		17	175	13
Reverse restrict pin plug × Manual transmission case		13	130	9.3
Manual transaxle case receiver × Manual transmission case		11	115	8.3
Gear shift fork No.1 × Gear shift fork shaft No.1		16	160	12
Gear shift fork No.2 × Gear shift fork shaft No.2		16	160	12
Gear shift head No.1 × Gear shift fork shaft No.2		16	160	12
Reverse shift arm bracket assy × Front transaxle case		17	175	13
Manual transmission case × Front transaxle case	bolt	29	300	22
	nut	29	300	22
Reverse idler gear shaft bolt × Manual transmission case		29	300	22
Lock ball assy No.2 × Manual transmission case		39	400	29
Shift detent ball × Manual transmission case		22	224	16
Shift detent ball × Front transaxle case		22	224	16
Bearing retainer rear × Manual transmission case		27	280	20
Gear shift fork No.3 × Gear shift fork shaft		16	160	12
Manual transmission output shaft rear set nut × output shaft		118	1200	87
Manual transmission case cover × Manual transmission case		18	185	14
Control shaft cover × Manual transmission case		20	200	14
Lock ball assy No.1 × Manual transmission case		29	300	22
Selecting bell crank assy × Manual transmission case		25	250	18
Floor shift control lever housing support bracket × Front transaxle case		18	188	14
Back-up lamp switch assy × Manual transmission case		40	410	30
Speedometer driven hole cover sub-assy × Manual transaxle		11	115	8.3
Release fork support × Front transaxle case		37	375	25
Clutch release cylinder assy × Manual transaxle		12	120	9
Manual transmission filler plug × Manual transaxle		39	400	29
Drain plug sub-assy × Manual transmission case		39	400	29

Part Tightened	N·m	kgf·cm	ft·lbf
Selecting bell crank No.2 plate washer × Selecting bell crank	12	120	9
Front defferential ring gear × Front differential case	77	790	57