

DTC	C1223/43	ABS CONTROL SYSTEM MALFUNCTION
------------	-----------------	---------------------------------------

CIRCUIT DESCRIPTION

This DTC is displayed when the VSC system receives the malfunction signal from ABS.

DTC No.	DTC Detecting Condition	Trouble Area
C1223/43	Malfunction in ABS control system	ABS control system

INSPECTION PROCEDURE

1	CHECK DTC
----------	------------------

(a) Check if the DTCs(for ABS) other than C1223/43 are recorded (See page [05-266](#)).

NEXT

REPAIR CIRCUIT INDICATED BY OUTPUT CODE
--