

DIAGNOSTIC TROUBLE CODE CHART

1. DTCS COMBINATION TABLE

(a) Confirm the according to combination of output DTCs.

Mode	U0121/94	U0123/62	U0124/95	U0126/63
Skid control ECU communication stop mode	○	○	○	○
Yaw rate sensor communication stop mode	–	○	○	–
Steering angle sensor communication stop mode	–	–	–	○

(b) Perform troubleshooting for the applicable mode.

Output Code	Suspected Area	See page
Skid control ECU communication stop mode (U0121/94, U0123/62, U0124/95 and U0126/63 are output simultaneously)	<ul style="list-style-type: none"> • Open circuit between skid control ECU and junction connector • Short between CANL circuit and CANH circuit • Short (GND) in CANL circuit • Short (+B) in CANL circuit • Skid control ECU • When trouble still continues even after completing the troubleshooting above, perform all the following troubleshooting for the communication stop models above (the yaw rate sensor and steering sensor communication stop models). 	05-705
Yaw rate sensor communication stop mode (U0123/62 and U0124/95 are output simultaneously)	<ul style="list-style-type: none"> • Open circuit between yaw rate sensor and junction connector • Yaw rate sensor 	05-720
Steering angle sensor communication stop mode (U0126/63 only)	<ul style="list-style-type: none"> • Open circuit between steering angle sensor and junction connector • Steering angle sensor 	05-717

2. DIAGNOSTIC TROUBLE CODE CHART

HINT:

When troubleshooting, refer to the above DTCs COMBINATION TABLE.

DTC No.	Detection Item	Trouble Area
U0121/94	Malfunction in CAN communication	<ul style="list-style-type: none"> • Open circuit for between skid control ECU and junction connector • Short circuit between CANL circuit and CANH circuit • Short (GND) circuit in CANL circuit • Short (+B) circuit in CANL circuit • Skid control ECU
U0123/62	Malfunction in CAN communication with yaw rate sensor	<ul style="list-style-type: none"> • Open circuit for between yaw rate sensor and junction connector • Yaw rate sensor
U0124/95	Malfunction in CAN communication with deceleration sensor	<ul style="list-style-type: none"> • Open circuit for between yaw rate sensor and junction connector • Yaw rate sensor
U0126/63	Malfunction in CAN communication with steering angle sensor	<ul style="list-style-type: none"> • Open circuit for between steering angle sensor and junction connector • Steering angle sensor