

# INITIALIZATION

## 1. RESET MEMORY

**CAUTION:**

Perform the RESET MEMORY (AT initialization) when replacing the automatic transaxle assy, engine assy or ECM.


**NOTICE:**

**Hand-held tester only**

- (a) Turn the ignition switch off.
- (b) Connect the hand-held tester to the DLC3.
- (c) Turn the ignition switch to the ON position.
- (d) Perform the reset memory procedure from the ENGINE menu.

**CAUTION:**

After performing the RESET MEMORY, be sure to perform the ROAD TEST described earlier.

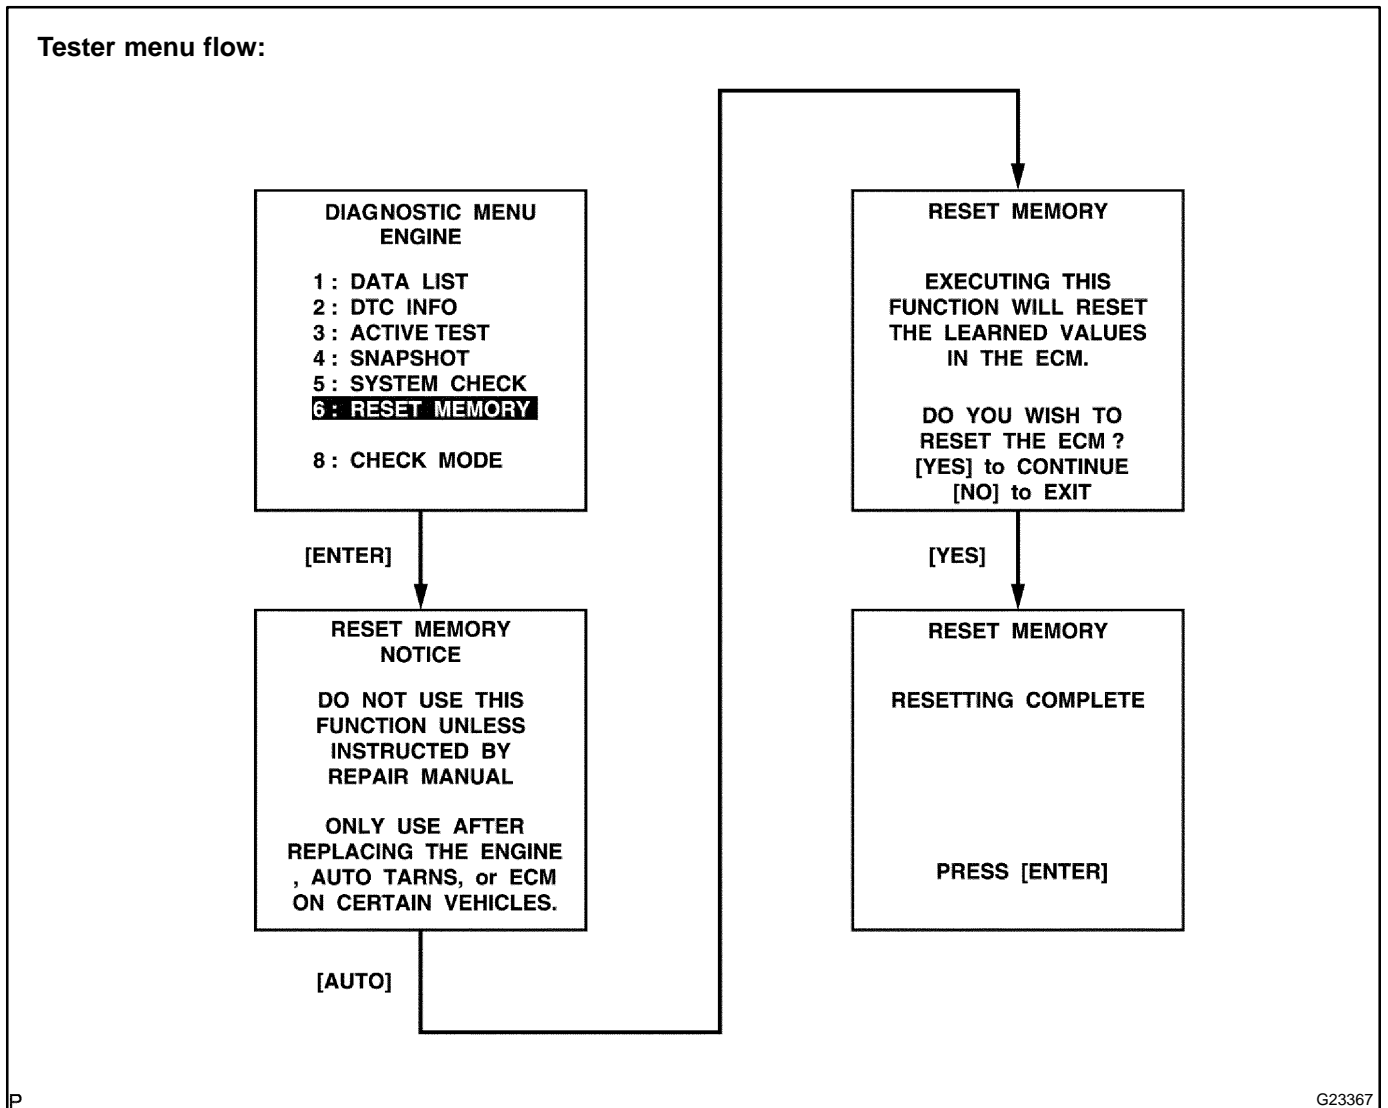

P

G23367