

ELECTRONIC CONTROLLED AUTOMATIC TRANSAXLE [ECT]

05C0T-04

PRECAUTION

NOTICE:

Perform the **RESET MEMORY (AT initialization)** when replacing the automatic transaxle assy, engine assy or ECM (See page [05-391](#)).

HINT:

Initialization can not be completed by only removing the battery.