

DIAGNOSIS SYSTEM

(a) Check the battery voltage.

Standard: 11 to 14 V

If the voltage is below 11 V, recharge the battery before proceeding.