

DIAGNOSTIC TROUBLE CODE CHART

If a trouble code is displayed during the DTC check, check the circuit listed for the code in the table below (Proceed to the page listed for that circuit).

DTC No. (See page)	Detection Item	Trouble Area	SRS Warning Light
B0100/13 (05-464)	• Short in D squib circuit	• Horn button assy (D squib) • Spiral cable sub-assy • Airbag sensor assy center • Instrument panel wire	ON
B0101/14 (05-468)	• Open in D squib circuit	• Horn button assy (D squib) • Spiral cable sub-assy • Airbag sensor assy center • Instrument panel wire	ON
B0102/11 (05-472)	• Short in D squib circuit (to ground)	• Horn button assy (D squib) • Spiral cable sub-assy • Airbag sensor assy center • Instrument panel wire	ON
B0103/12 (05-476)	• Short in D squib circuit (to B+)	• Horn button assy (D squib) • Spiral cable sub-assy • Airbag sensor assy center • Instrument panel wire	ON
B0105/53 (05-481)	• Short in P squib circuit	• Instrument panel passenger airbag assy (P squib) • Airbag sensor assy center • Instrument panel wire	ON
B0106/54 (05-484)	• Open in P squib circuit	• Instrument panel passenger airbag assy (P squib) • Airbag sensor assy center • Instrument panel wire	ON
B0107/51 (05-487)	• Short in P squib circuit (to ground)	• Instrument panel passenger airbag assy (P squib) • Airbag sensor assy center • Instrument panel wire	ON
B0108/52 (05-490)	• Short in P squib circuit (to B+)	• Instrument panel passenger airbag assy (P squib) • Airbag sensor assy center • Instrument panel wire	ON
B0121/26 (05-493)	• Seat belt buckle switch (RH) malfunction	• Front seat inner belt assy RH (Seat belt buckle switch RH) • Airbag sensor assy center • Floor wire	ON
B0126/27 (05-497)	• Seat belt buckle switch (LH) malfunction	• Front seat inner belt assy LH (Seat belt buckle switch LH) • Airbag sensor assy center • Floor wire	ON
B0130/63 (05-501)	• Short in P/T squib (RH) circuit	• Seat belt pretensioner RH (P/T squib RH) • Airbag sensor assy center • Floor wire	Blink
B0131/64 (05-504)	• Open in P/T squib (RH) circuit	• Seat belt pretensioner RH (P/T squib RH) • Airbag sensor assy center • Floor wire	Blink
B0132/61 (05-507)	• Short in P/T squib (RH) circuit (to ground)	• Seat belt pretensioner RH (P/T squib RH) • Airbag sensor assy center • Floor wire	Blink
B0133/62 (05-510)	• Short in P/T squib (RH) circuit (to B+)	• Seat belt pretensioner RH (P/T squib RH) • Airbag sensor assy center • Floor wire	Blink
B0135/73 (05-513)	• Short in P/T squib (LH) circuit	• Seat belt pretensioner LH (P/T squib LH) • Airbag sensor assy center • Floor wire	Blink
B0136/74 (05-516)	• Open in P/T squib (LH) circuit	• Seat belt pretensioner LH (P/T squib LH) • Airbag sensor assy center • Floor wire	Blink

DIAGNOSTICS – SUPPLEMENTAL RESTRAINT SYSTEM

B0137/71 (05-519)	• Short in P/T squib (LH) circuit (to ground)	• Seat belt pretensioner LH (P/T squib LH) • Airbag sensor assy center • Floor wire	Blink
B0138/72 (05-522)	• Short in P/T squib (LH) circuit (to B+)	• Seat belt pretensioner LH (P/T squib LH) • Airbag sensor assy center • Floor wire	Blink
B1100/31 (05-525)	• Airbag sensor assy center malfunction	• Airbag sensor assy center	ON
B1153/25 (05-526)	• Seat position airbag sensor malfunction	• Seat position airbag sensor • Airbag sensor assy center • Front seat inner belt assy LH • Floor wire	ON
B1156/15 B1157/15 (05-534)	• Airbag front RH sensor malfunction	• Airbag front RH sensor • Airbag sensor assy center • Engine room main wire • Instrument panel wire	ON
B1158/16 B1159/16 (05-541)	• Airbag sensor front LH malfunction	• Airbag sensor front LH • Airbag sensor assy center • Engine room main wire • Instrument panel wire	ON
B1180/17 (05-548)	• Short in D squib (2nd step) circuit	• Horn button assy (D squib, 2nd step) • Spiral cable sub-assy • Airbag sensor assy center • Instrument panel wire	ON
B1181/18 (05-552)	• Open in D squib (2nd step) circuit	• Horn button assy (D squib, 2nd step) • Spiral cable sub-assy • Airbag sensor assy center • Instrument panel wire	ON
B1182/19 (05-556)	• Short in D squib (2nd step) circuit (to ground)	• Horn button assy (D squib, 2nd step) • Spiral cable sub-assy • Airbag sensor assy center • Instrument panel wire	ON
B1183/22 (05-560)	• Short in D squib (2nd step) circuit (to B+)	• Horn button assy (D squib, 2nd step) • Spiral cable sub-assy • Airbag sensor assy center • Instrument panel wire	ON
B1185/57 (05-564)	• Short in P squib (2nd step) circuit	• Instrument panel passenger airbag assy (P squib, 2nd step) • Airbag sensor assy center • Instrument panel wire	ON
B1186/58 (05-567)	• Open in P squib (2nd step) circuit	• Instrument panel passenger airbag assy (P squib, 2nd step) • Airbag sensor assy center • Instrument panel wire	ON
B1187/55 (05-570)	• Short in P squib (2nd step) circuit (to ground)	• Instrument panel passenger airbag assy (P squib, 2nd step) • Airbag sensor assy center • Instrument panel wire	ON
B1188/56 (05-573)	• Short in D squib (2nd step) circuit (to B+)	• Instrument panel passenger airbag assy (P squib, 2nd step) • Airbag sensor assy center • Instrument panel wire	ON
Normal (05-576)	• System normal	–	OFF
	• Voltage source drop	• Battery • Airbag sensor assy center	ON

HINT:

- When the SRS warning light remains on and the DTCs output is the normal system code, a voltage source drop is likely to occur. This malfunction is not stored in the memory of the airbag sensor assy center. If the power source voltage returns to normal, the SRS warning light will automatically go out.
- When 2 or more codes are indicated, the code with the lower number appears first.
- If a code is not listed on the display chart, the airbag sensor assy center may have failed.
- In the case of any malfunction concerning an open circuit, short to ground, or short to B+ due to a squib, another malfunction code may not be detected. In this case, repair the malfunction currently indicated, and then perform the malfunction diagnosis again.