


## TERMINALS OF ECU

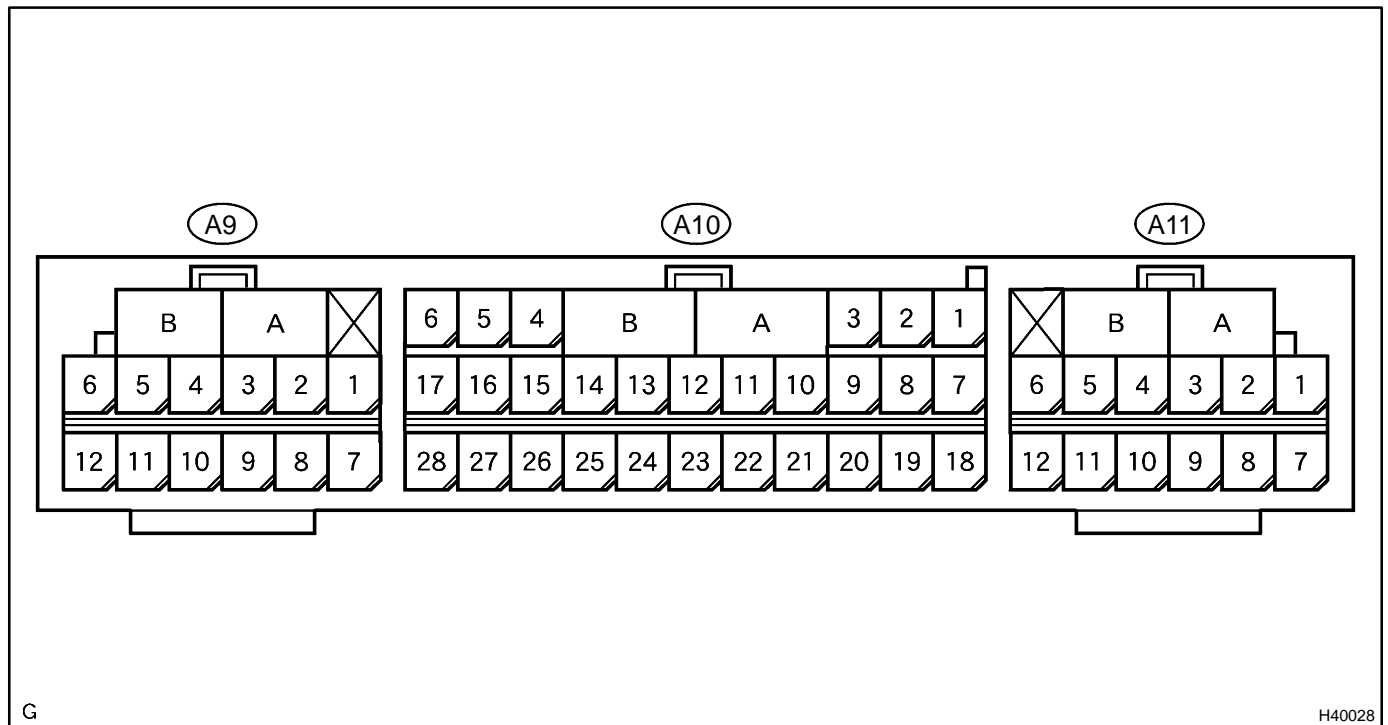

G

H40028

No.	Symbol	Destination
A	-	(Electrical Connector Check Mechanism)
B	-	(Electrical Connector Check Mechanism)
A10-3	LA	Combination Meter Assy (SRS Warning Light)
A10-5	IG2	AM2 Fuse
A10-7	P2-	Instrument Panel Passenger Airbag Assy (P Squib, 2nd step)
A10-8	P2+	Instrument Panel Passenger Airbag Assy (P Squib, 2nd step)
A10-9	+SR	Airbag Front RH Sensor
A10-10	P+	Instrument Panel Passenger Airbag Assy (P Squib)
A10-11	P-	Instrument Panel Passenger Airbag Assy (P Squib)
A10-12	SIL	DLC3
A10-13	D-	Horn Button Assy (D Squib)
A10-14	D+	Horn Button Assy (D Squib)
A10-15	+SL	Airbag Sensor Front LH
A10-16	D2+	Horn Button Assy (D Squib, 2nd step)
A10-17	D2-	Horn Button Assy (D Squib, 2nd step)
A10-19	TC	DLC3
A10-20	-SR	Airbag Front RH Sensor
A10-23	GSW2	ECM
A10-26	-SL	Airbag Sensor Front LH
A10-27	E1	Ground
A10-28	E2	Ground
A9-1	PL-	Front Seat Outer Belt Assy LH (Squib)
A9-2	PL+	Front Seat Outer Belt Assy LH (Squib)
A9-3	LSP+	Seat Position Airbag Sensor
A9-7	LBE-	Front Seat Inner Belt Assy LH
A9-8	LSP-	Seat Position Airbag Sensor
A9-11	LBE+	Front Seat Inner Belt Assy LH
A11-5	PR+	Front Seat Outer Belt Assy RH (Squib)
A11-6	PR-	Front Seat Outer Belt Assy RH (Squib)

**DIAGNOSTICS - SUPPLEMENTAL RESTRAINT SYSTEM**

No.	Symbol	Destination
A11-8	RBE+	Front Seat Inner Belt Assy RH
A11-12	RBE-	Front Seat Inner Belt Assy RH