

## SRS WARNING LIGHT CIRCUIT MALFUNCTION (DOES NOT LIGHT UP, WHEN IGNITION SWITCH IS TURNED TO ON)

### CIRCUIT DESCRIPTION

The SRS warning light is located on the combination meter assy.

When the SRS is normal, the SRS warning light comes on for approximately 6 seconds after the ignition switch is turned from the LOCK position to the ON position, and then goes off automatically.

If there is a malfunction in the SRS, the SRS warning light comes on to inform the driver of a problem.

When terminals TC and CG of the DLC3 are connected, the DTC is displayed by blinking the SRS warning light.

### WIRING DIAGRAM

See page [05-579](#).

### INSPECTION PROCEDURE

#### 1 CHECK SOURCE VOLTAGE

- (a) Measure the voltage of the battery.

**Standard:**

Tester connection	Condition	Specified condition
Positive terminal - Negative terminal	Always	11 to 14 V

**NG** →

**REPAIR OR REPLACE CHARGING SYSTEM AND BATTERY**

**OK**

#### 2 CHECK AIR BAG SENSOR ASSY CENTER

- (a) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.  
 (b) Disconnect the connector from the airbag sensor assy center.  
 (c) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.  
 (d) Turn the ignition switch to the ON position.  
 (e) Check that SRS warning light on the combination meter assy comes on.

**OK:**

**Not SRS warning light come on.**


**NG** →

**Go to step 3**

**OK**

**REPLACE AIR BAG SENSOR ASSY CENTER**

**3 CHECK WIRE HARNESS(COMBINATION METER ASSY - AIRBAG SENSOR ASSY CENTER)**

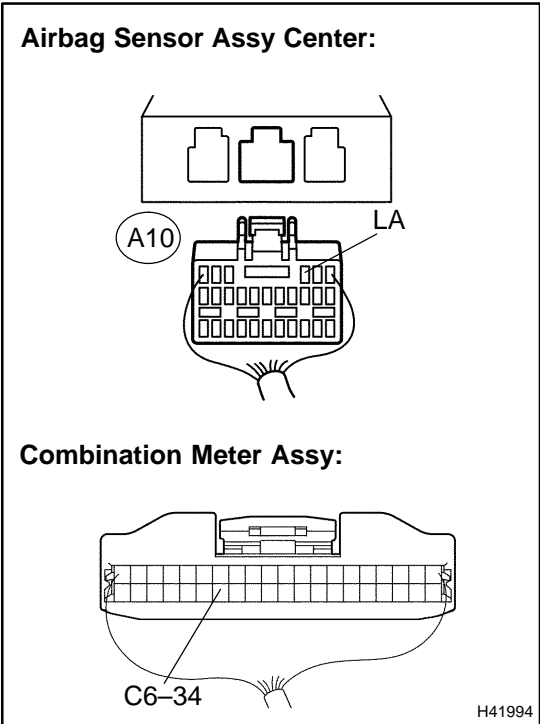

- (a) Turn the ignition switch to the LOCK position.
  - (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
  - (c) Disconnect the connector from the combination meter assy.
  - (d) Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
  - (e) Turn the ignition switch to the ON position.
  - (f) Check that SRS warning light on the combination meter assy comes on.
- OK:**  
**SRS warning light comes on.**

**NG** → **REPAIR OR REPLACE COMBINATION METER ASSY OR WIRE HARNESS BETWEEN COMBINATION METER ASSY AND BATTERY**

**OK**

**REPAIR OR REPLACE HARNESS BETWEEN AIRBAG SENSOR ASSY CENTER AND COMBINATION METER ASSY**