

SUPPLEMENTAL RESTRAINT SYSTEM

05DMQ-01

PRECAUTION

1. SUPPLEMENTAL RESTRAINT SYSTEM

- (a) Wait for at least 90 seconds after disconnecting the negative (–) terminal from the battery when performing the following.
 - (1) Replacing the airbag sensor assy center, airbag sensor front LH and airbag front RH sensor.
- (b) Do not use an airbag sensor assy center, airbag sensor front LH or airbag front RH sensor that has been dropped during the operation or transportation.
- (c) When installing the airbag sensor assy center, airbag sensor front LH and airbag front RH sensor, ensure that they are installed with the specified torque.
- (d) Do not disassemble the airbag sensor assy center, airbag sensor front LH or airbag front RH sensor.