

## PROBLEM SYMPTOMS TABLE

### HINT:

Proceed to the troubleshooting for each circuit in the table below.

Symptom	Suspected Area	See page
<ul style="list-style-type: none"> <li>When the ignition switch is in the ON position, the SRS warning light sometimes comes on after approximately 6 seconds.</li> <li>SRS warning light always comes on even when DTC is not output.</li> </ul>	<ul style="list-style-type: none"> <li>SRS warning light circuit malfunction (Always lights up, when DTC is not output).</li> </ul>	05-579
<ul style="list-style-type: none"> <li>With the ignition switch is in the ON position, the SRS warning light does not come on.</li> </ul>	<ul style="list-style-type: none"> <li>SRS warning light circuit malfunction (Does not light up, when ignition switch is turned to the ON position).</li> </ul>	05-582
<ul style="list-style-type: none"> <li>SRS warning light comes on normally but the DTC and normal system code are not displayed.</li> <li>The terminal TC and CG are not connected but the DTC and normal system code are displayed.</li> </ul>	<ul style="list-style-type: none"> <li>TC Terminal circuit</li> </ul>	05-584