

HOW TO PROCEED WITH TROUBLESHOOTING

The hand-held tester can be used at steps 4, 6, 8 and 9.

1 VEHICLE BROUGHT TO WORKSHOP



2 CUSTOMER PROBLEM ANALYSIS (See page 05-449)

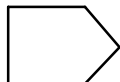


3 WARNING LIGHT CHECK (See page 05-451)



4 DTCs CHECK (Present and Past DTCs) (See page 05-453)

 DTCs ARE OUTPUT (INCLUDING NORMAL SYSTEM CODE): Go to step 5

 DTCs ARE NOT OUTPUT: PROBLEM SYMPTOMS TABLE (See page 05-463)

5 DTCs CHART (See page 05-460)



6 CIRCUIT INSPECTION (See page 05-464 to 05-573)



7 REPAIR



8 CLEAR THE DTCs (Present and Past DTCs) (See page 05-453)



9 DTCs CHECK (Present and Past DTCs) (See page 05-453)

 DTCs ARE NOT OUTPUT: Go to step 11

 DTCs ARE OUTPUT: Go to step 5

10	SYMPTOM SIMULATION (See page 01-20)
-----------	--

 **WARNING LIGHT REMAINS OFF: Go to step 11**

 **WARNING LIGHT IS ON: Go to step 5**

11	CONFIRMATION TEST
-----------	--------------------------



END
