


CHARCOAL CANISTER ASSY REPLACEMENT

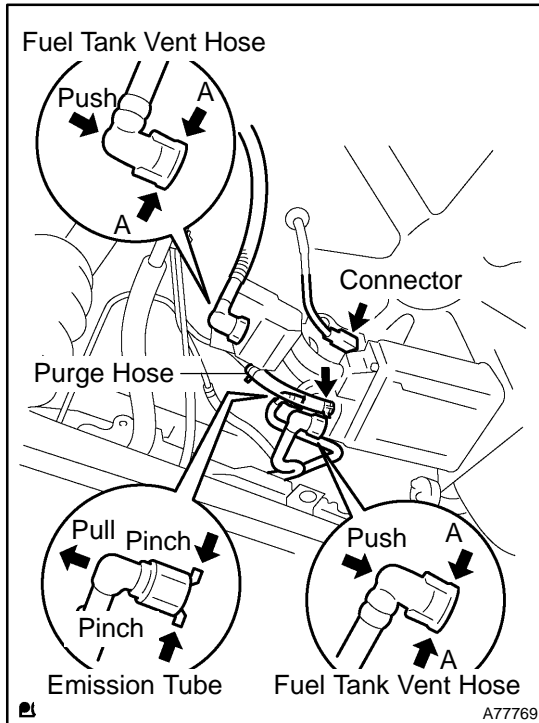

1. REMOVE CHARCOAL CANISTER ASSY

- (a) Disconnect a connector.
- (b) Disconnect the 2 fuel tank vent hoses.
 - (1) Deeply push the connector inside.
 - (2) Pinch portion A.
 - (3) Pull out the connector.
- (c) Disconnect the purge hose.
- (d) Pinch the fuel tube connector clip and then pull out the fuel emission tube.

NOTICE:

- Check around the connector for dirt or mud before this operation and remove the dirt if necessary.
- Be careful of mud because the quick connector has an O-ring which seals the pipe and connector that can be contaminated.
- Do not use any tool in this operation.
- Do not bend or twist the nylon tube. Protect the connector by covering it with a vinyl or plastic bag.
- When the pipe and connector are stuck, push and pull the connector to release and pull the connector out carefully.

- (e) Remove the 3 bolts and charcoal canister.

2. INSTALL CHARCOAL CANISTER ASSY

- (a) Install the charcoal canister with 3 bolts.
Torque: 19 N·m (193 kgf·cm, 14 ft·lbf)
- (b) Connect the fuel emission tube.
- (c) Connect the purge hose.
- (d) Connect the 2 fuel tank vent hoses.
- (e) Connect the connector.