


CAMSHAFT POSITION SENSOR REPLACEMENT

1808N-01

1. REMOVE AIR CLEANER ASSY (See page 10-8)

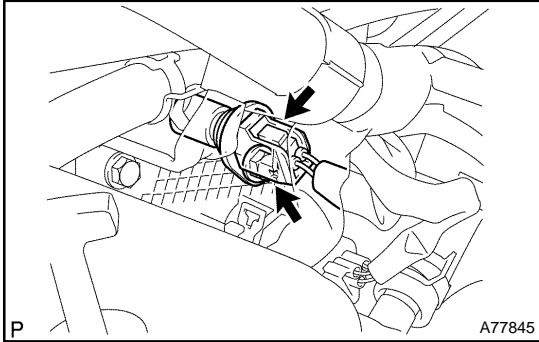

2. REMOVE CAMSHAFT POSITION SENSOR

- (a) Disconnect the camshaft position sensor connector.
- (b) Remove the bolt and camshaft position sensor.

3. INSTALL CAMSHAFT POSITION SENSOR

- (a) Apply a light coat of engine oil to the O-ring on the camshaft position sensor.
- (b) Install the camshaft position sensor with the bolt.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)
- (c) Connect the camshaft position sensor connector.

4. INSTALL AIR CLEANER ASSY (See page 10-8)