


CRANKSHAFT POSITION SENSOR REPLACEMENT

18080-01

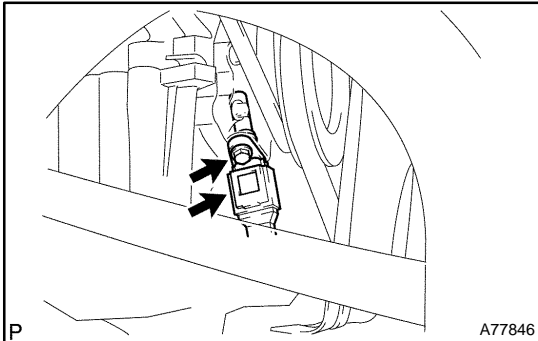

1. REMOVE CRANKSHAFT POSITION SENSOR

- (a) Disconnect the crankshaft position sensor connector.
- (b) Remove the bolt and crankshaft position sensor.

2. INSTALL CRANKSHAFT POSITION SENSOR

- (a) Apply a light coat of engine oil to the O-ring on the crankshaft position sensor.
- (b) Install the crankshaft position sensor with the bolt.
Torque: 7.5 N·m (76 kgf·cm, 66 in.·lbf)
- (c) Connect the crankshaft position sensor connector.