

SHOCK ABSORBER ASSY REAR LH


REPLACEMENT

270F7-01

HINT:


COMPONENTS: See page 27-3

1. REMOVE REAR ABSORBER CAP
2. REMOVE REAR WHEEL

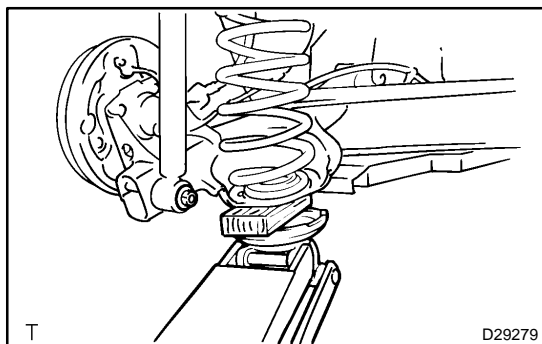


3. REMOVE SHOCK ABSORBER ASSY REAR LH


- (a) Support rear axle beam with a jack.

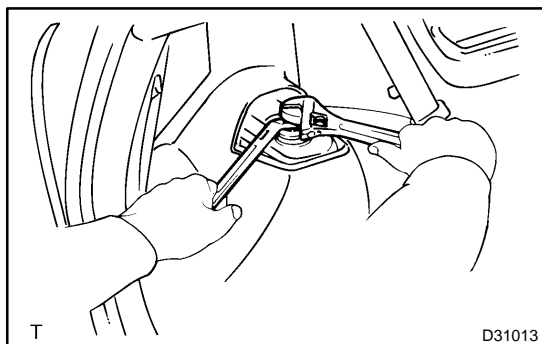

- (b) While holding the piston rod, remove the 2 nuts.
- (c) Remove the washer and the upper suspension support.

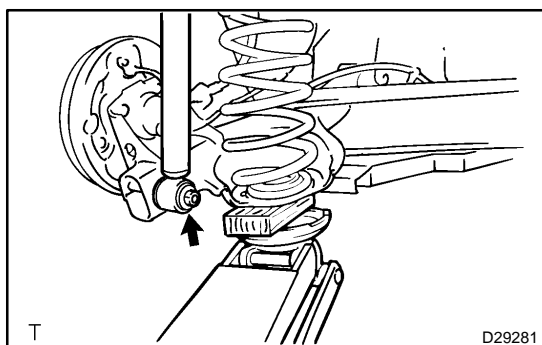

- (d) Remove the nut, the washer and the shock absorber assy rear LH.
- (e) Remove the spring bumper.

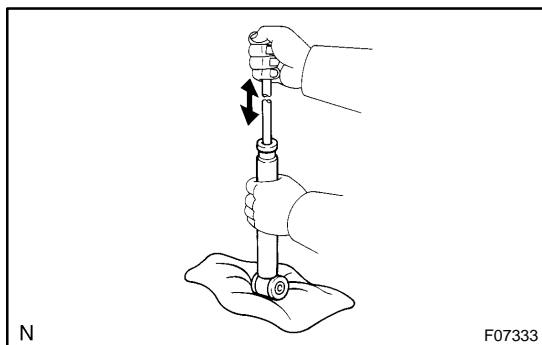

4. INSPECT SHOCK ABSORBER ASSY REAR LH

- (a) Compress and extend the shock absorber rod and check that there is no abnormal resistance or unusual sound during operation.


If there is any abnormality, replace the shock absorber with a new one.

CAUTION:


When disposing of the shock absorber, see DISPOSAL on page 27-6.

5. INSTALL SHOCK ABSORBER ASSY REAR LH

- (a) Install the spring bumper.
- (b) Install the shock absorber, the upper suspension support and the washer on the body.

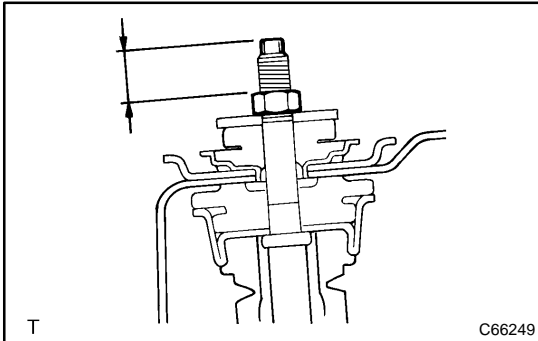

- (c) While holding the piston rod, install the lower nut so that the piston rod protrudes 15 to 18 mm (0.591 to 0.709 in.) from the lower nut.
- (d) Install the upper nut and torque it against the lower one.
Torque: 25 N·m (255 kgf·cm, 18 ft·lbf)

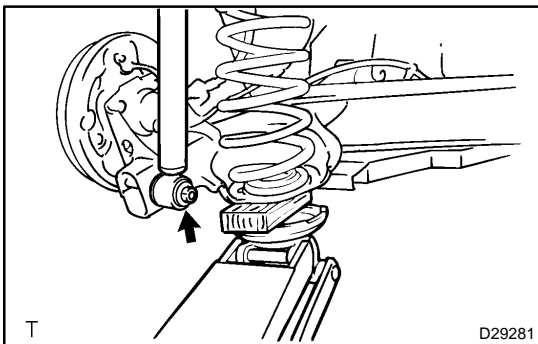

- (e) While lifting with the jack, install the shock absorber on the rear axle beam with the washer and the nut.
Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)

6. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

7. INSPECT REAR WHEEL ALIGNMENT (See page 27-2)