


FRONT AXLE LH HUB BOLT REPLACEMENT

300JR-01

HINT:


COMPONENTS: See page 30-18

1. REMOVE FRONT WHEEL
2. SEPARATE FRONT DISC BRAKE CALIPER ASSY LH (See page 30-19)
3. REMOVE FRONT DISC

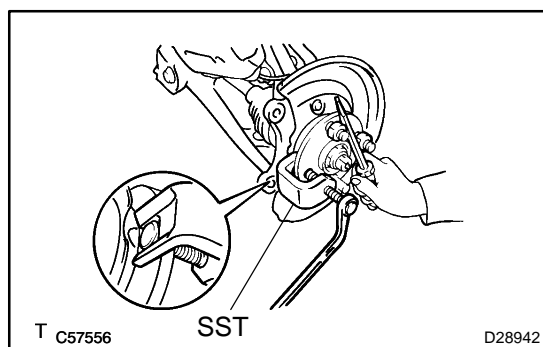

4. REMOVE FRONT AXLE LH HUB BOLT

- (a) Using SST and a screwdriver or an equivalent to hold the axle hub sub-assy LH, remove the LH hub bolt.
SST 09628-10011

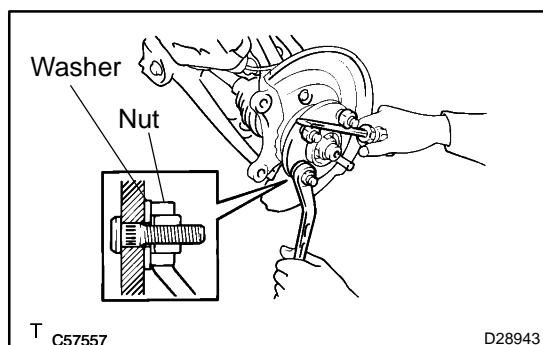

5. INSTALL FRONT AXLE LH HUB BOLT

- (a) Install the washer and the nut to a new LH hub bolt as shown in the illustration.
- (b) Using a screwdriver or an equivalent to hold the axle hub sub-assy LH, install the LH hub bolt by tightening the nut.

6. INSTALL FRONT DISC
7. INSTALL FRONT DISC BRAKE CALIPER ASSY LH (See page 30-19)
8. INSTALL FRONT WHEEL
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)