



## REPLACEMENT

1. REMOVE REAR WHEEL
2. REMOVE REAR BRAKE DRUM SUB-ASSY
3. SEPARATE SKID CONTROL SENSOR WIRE
  - (a) Disconnect the skid control sensor connector.

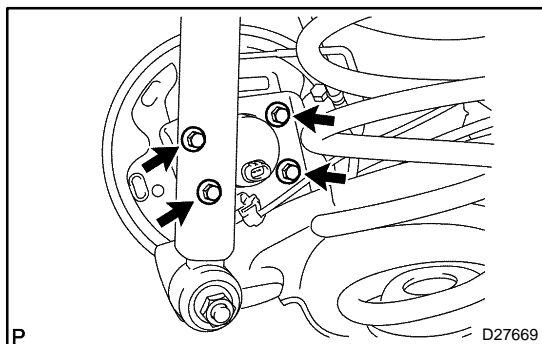

4. REMOVE REAR AXLE HUB & BEARING ASSY LH
  - (a) Remove the 4 bolts and the hub & bearing assy LH.

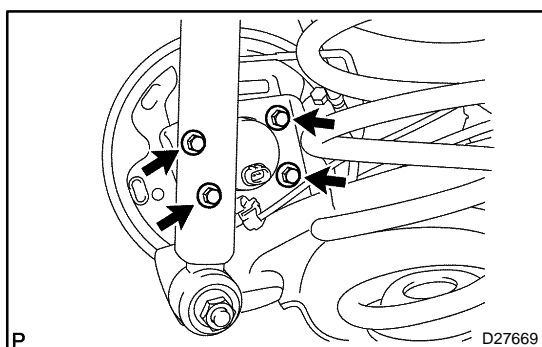

5. INSTALL REAR AXLE HUB & BEARING ASSY LH
  - (a) Install the hub & bearing assy LH with the 4 bolts.  
Torque: 63 N·m (642 kgf·cm, 46 ft·lbf)

6. CONNECT SKID CONTROL SENSOR WIRE
  - (a) Connect the skid control sensor connector.

### NOTICE:

Do not twist the sensor wire when connecting it.

7. INSPECT REAR AXLE DEVIATION AND BACKLASH (See page 30-2)
8. INSTALL REAR BRAKE DRUM SUB-ASSY
9. INSTALL REAR WHEEL  
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
10. CHECK ABS SPEED SENSOR SIGNAL (See page 05-269)