


REAR AXLE HUB BOLT REPLACEMENT

HINT:

COMPONENTS: See page 30-24


1. REMOVE REAR WHEEL
2. REMOVE REAR BRAKE DRUM SUB-ASSY

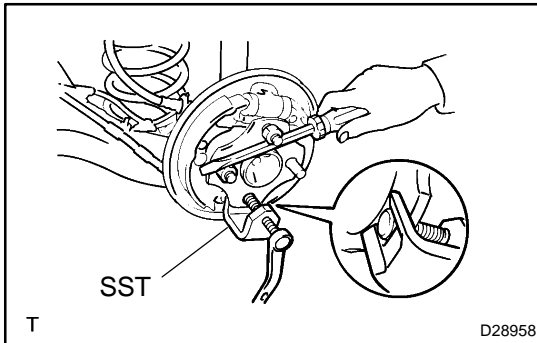

3. REMOVE REAR AXLE LH HUB BOLT

- (a) Using SST and a screwdriver or an equivalent, remove the LH hub bolt.

SST 09628-10011

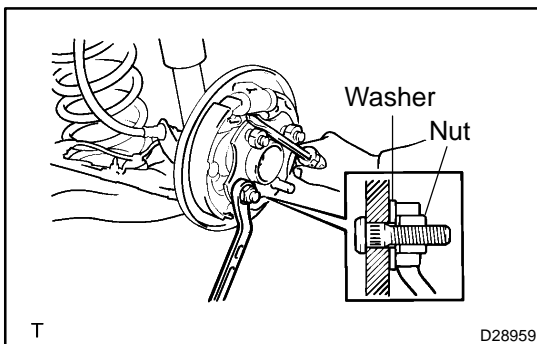

4. INSTALL REAR AXLE LH HUB BOLT

- (a) Install the washer and the nut to a new LH hub bolt as shown in the illustration.
- (b) Using a screwdriver or an equivalent to hold the hub & bearing assy, install the LH hub bolt by tightening the nut.

5. INSTALL REAR BRAKE DRUM SUB-ASSY
 6. INSTALL REAR WHEEL
- Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)