


## REPLACEMENT

### HINT:


For parking brake cable assy No. 2, follow the same procedures as for the RH.

1. **REMOVE SHIFT LEVER KNOB SUB-ASSY (M/T TRANSAXLE)**
2. **REMOVE CONSOLE BOX REAR COVER**
3. **REMOVE CONSOLE BOX CARPET**
4. **REMOVE CONSOLE BOX ASSY REAR(See page 33-4)**
5. **LOOSEN WIRE ADJUSTING NUT NO.1**
  - (a) Remove the wire adjusting nut No.1.
6. **REMOVE FLOOR PANEL BRACE FRONT**
  - (a) Remove the 2 bolts and the floor panel brace front.
7. **REMOVE EXHAUST PIPE ASSY FRONT(See page 15-3)**

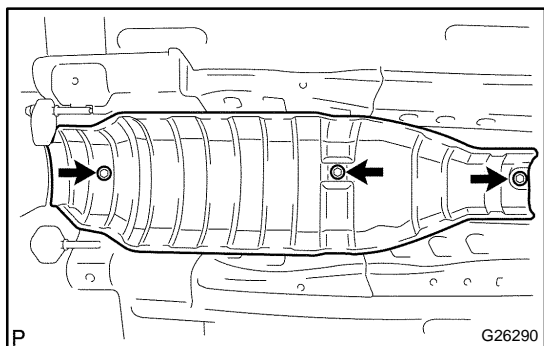

8. **REMOVE FRONT FLOOR HEAT INSULATOR NO.2**
  - (a) Remove the 3 bolts and the front floor heat insulator No.2



9. **SEPARATE PARKING BRAKE CABLE ASSY NO.3**
  - (a) Remove the 4 bolts and disconnect the parking brake cable No. 3 from the body.
  - (b) Disconnect the parking brake cable assy No. 3 from the parking brake equalizer, and remove the parking brake cable No. 3.
10. **REMOVE REAR WHEEL**
11. **REMOVE REAR BRAKE DRUM SUB-ASSY(See page 32-30)**
12. **REMOVE FRONT BRAKE SHOE(See page 32-30)**  
SST 09718-00010
13. **REMOVE REAR BRAKE AUTOMATIC ADJUST LEVER LH(See page 32-30)**  
SST 09718-00010
14. **REMOVE REAR BRAKE SHOE(See page 32-30)**  
SST 09718-00010

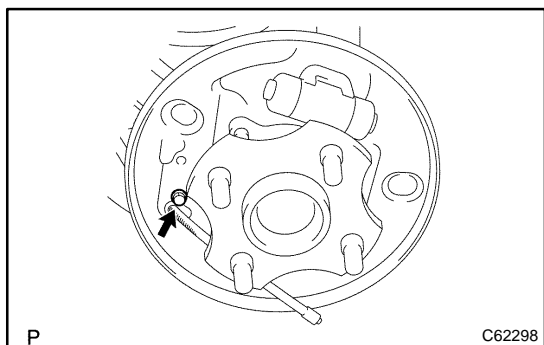

15. **REMOVE PARKING BRAKE CABLE ASSY NO.3**
  - (a) Remove the bolt, and disconnect the parking brake cable assy No. 3 from the backing plate.

**16. INSTALL PARKING BRAKE CABLE ASSY NO.3**

- (a) Connect the parking brake cable assy No. 3 to the parking brake cable equalizer.
- (b) Install the parking brake cable assy No. 3 with the 4 bolts.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**

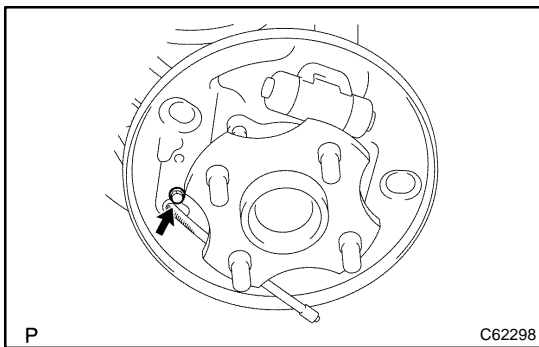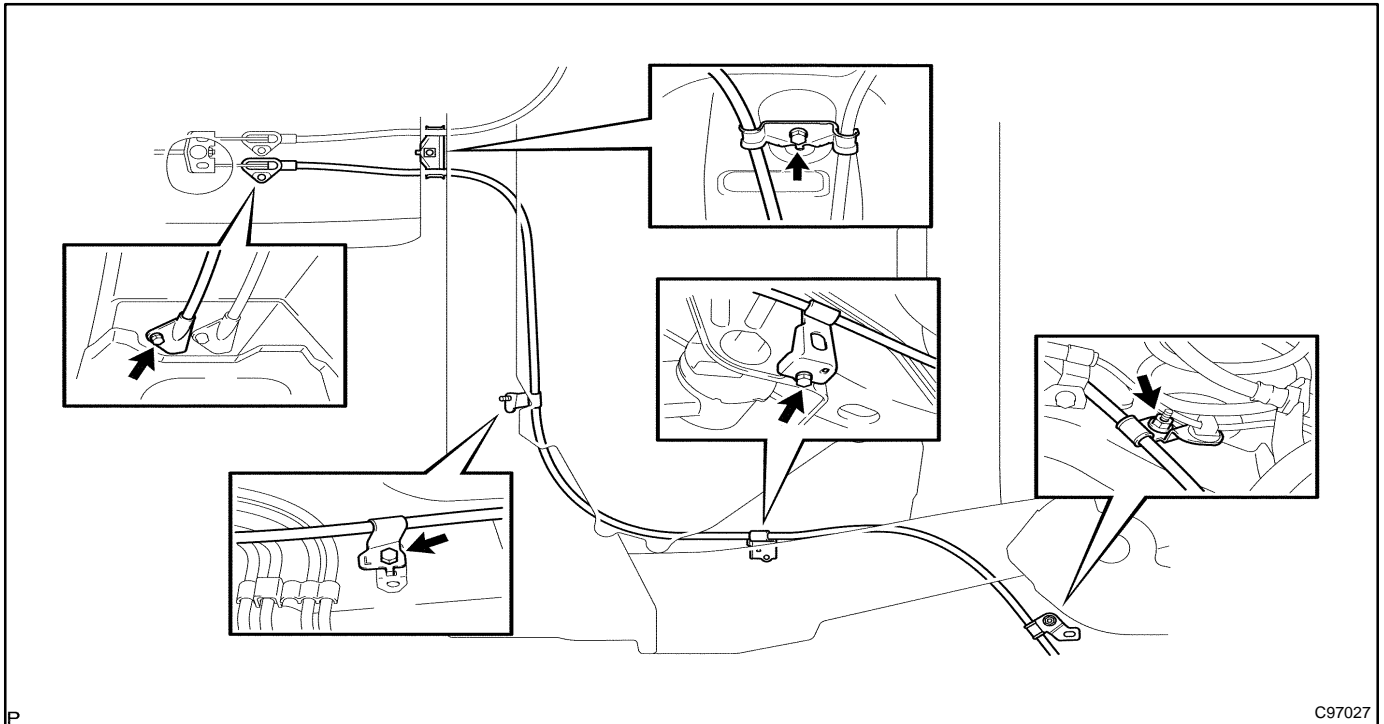**17. CONNECT PARKING BRAKE CABLE ASSY NO.3**

- (a) Install the parking brake cable assy No. 3 with the bolt to the backing plate.  
**Torque: 7.8 N·m (80 kgf·cm, 69 in.-lbf)**


**18. APPLICATION HIGH TEMPERATURE GREASE(See page 32-30)****19. INSTALL REAR BRAKE SHOE(See page 32-30)**

SST 09718-00010

**20. INSTALL REAR BRAKE SHOE RETURN SPRING(See page 32-30)****21. INSTALL REAR BRAKE AUTOMATIC ADJUST LEVER LH(See page 32-30)**

SST 09718-00010

22. **INSTALL FRONT BRAKE SHOE**(See page 32-30)  
SST 09718-00010
23. **CHECK REAR DRUM BRAKE INSTALLATION**(See page 32-30)
24. **INSTALL REAR BRAKE DRUM SUB-ASSY**(See page 32-30)
25. **ADJUST REAR DRUM BRAKE SHOE CLEARANCE**(See page 32-30)
26. **INSTALL REAR WHEEL**  
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
27. **TEMPORARILY TIGHTEN WIRE ADJUSTING NUT NO.1**  
(a) Install the wire adjusting nut No.1.

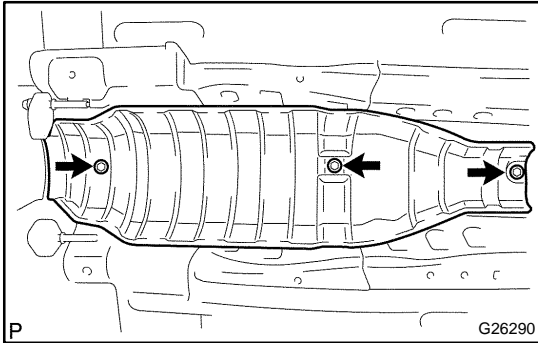

28. **INSTALL FRONT FLOOR HEAT INSULATOR NO.2**  
(a) Install the front floor heat insulator No.2 with the 3 bolts.  
Torque: 5.5N·m (55kgf·cm, 48 in·lbf)

29. **INSTALL EXHAUST PIPE ASSY FRONT**(See page 15-3)
30. **INSTALL FLOOR PANEL BRACE FRONT**  
(a) Install the floor panel brace front with the 2 bolts.
31. **CHECK PARKING BRAKE LEVER TRAVEL**(See page 33-2)
32. **ADJUST PARKING BRAKE LEVER TRAVEL**(See page 33-2)
33. **CHECK EXHAUST LEAKAGE**(See page 15-3)