


## ADJUSTMENT

1. REMOVE REAR WHEEL
2. ADJUST REAR DRUM BRAKE SHOE CLEARANCE (See page 32-30)
3. INSTALL REAR WHEEL  
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
4. CHECK PARKING BRAKE LEVER TRAVEL
  - (a) Pull the parking brake lever all the way up, and count the number of clicks.  
Parking brake lever travel: 6 to 9 clicks at 196 N (20 kgf, 44.1 lbf)

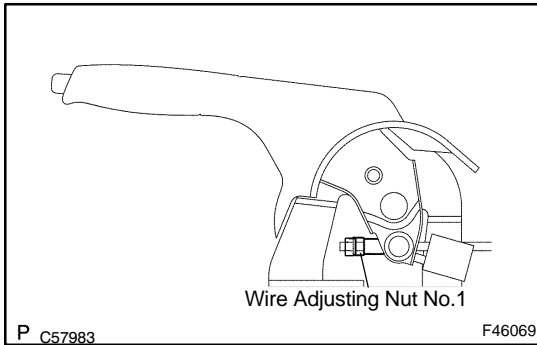

5. ADJUST PARKING BRAKE LEVER TRAVEL
  - (a) Remove the console box hole cover.
  - (b) Remove the console box carpet.
  - (c) Remove the console box assy rear.
  - (d) Turn the wire adjusting nut No.1 until the lever travel becomes correct.
  - (e) Tighten the lock nut.  
Torque: 5.4N·m (55kgf·cm, 48 in·lbf)