



ADJUSTMENT

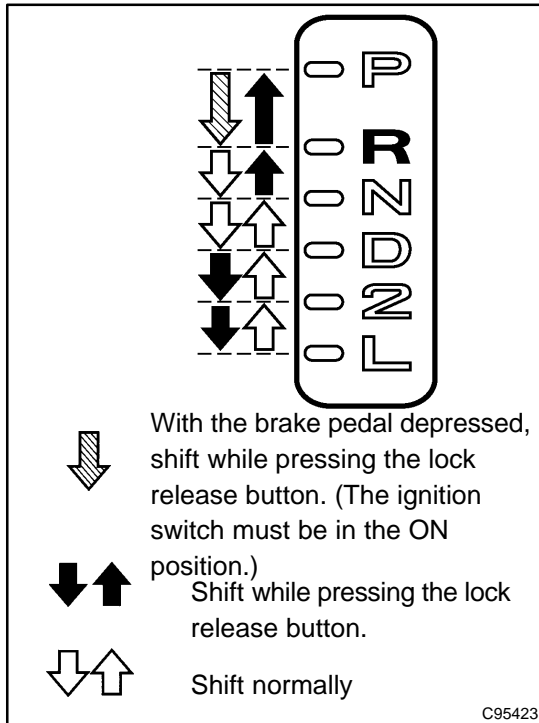

1. INSPECT SHIFT LEVER POSITION

- When adjusting the shift lever to each position, make sure that it moves smoothly, can be properly operated and the position indicator displays correctly.
 - Positions which can be operated without pressing the shift lever knob button**
R → N → D, L → 2 → D → N
 - Positions which can be operated only while pressing the shift lever knob button**
2 → L, N → R → P
 - Positions which can be operated only while pressing the shift lever knob button, the ignition switch is in the ON position and the brake pedal is depressed**
P → R
- When starting the engine, make sure that the vehicle moves forward when shifting from the N to D position, and moves rearward when shifting to the R position.

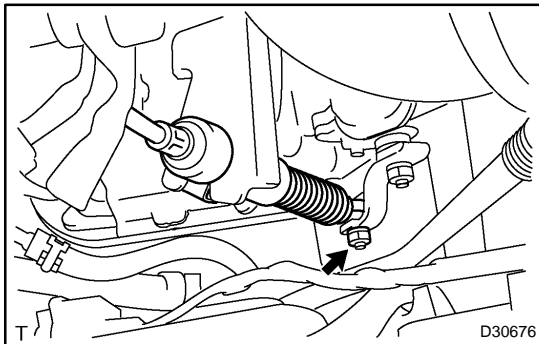

2. ADJUST SHIFT LEVER POSITION

- Loosen the nut on the control shaft lever.
- Turn the lever counterclockwise until it stops, then turn it clockwise 2 notches.
- Set the shift lever to the N position.
- While holding the shift lever lightly toward the R position side, tighten the shaft lever nut.
 - Torque: 12 N·m (122 kgf·cm, 9 ft·lbf)**
- Start the engine and make sure that the vehicle moves forward when adjusting the lever from the N to D position and reverses when adjusting it to the R position.

