


SHIFT LOCK CONTROL SWITCH (ATM) INSPECTION


4011P-02

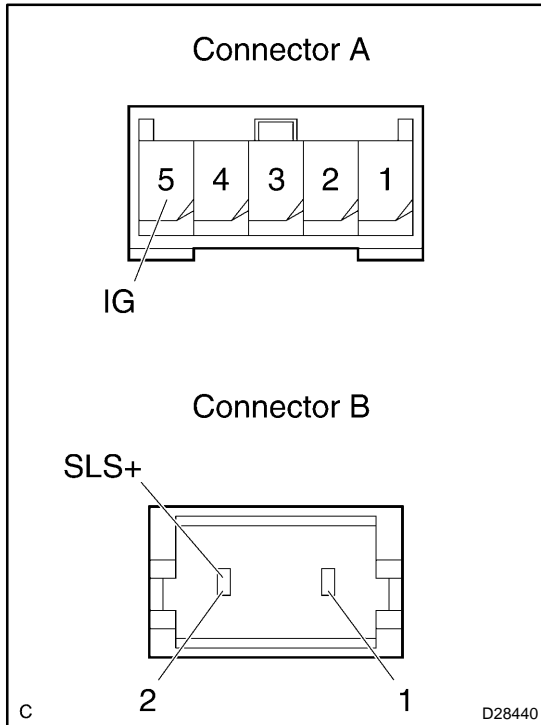

1. INSPECT SHIFT LOCK CONTROL SWITCH

- (a) Disconnect the connector of the shift lock control switch.
- (b) Measure the resistance according to the value(s) in the table below.

Terminal	Measuring Condition	Specified Value
A5 (IG) – B2 (SLS+)	Switch ON	Below 1 Ω
A5 (IG) – B2 (SLS+)	Switch OFF	10 kΩ or higher

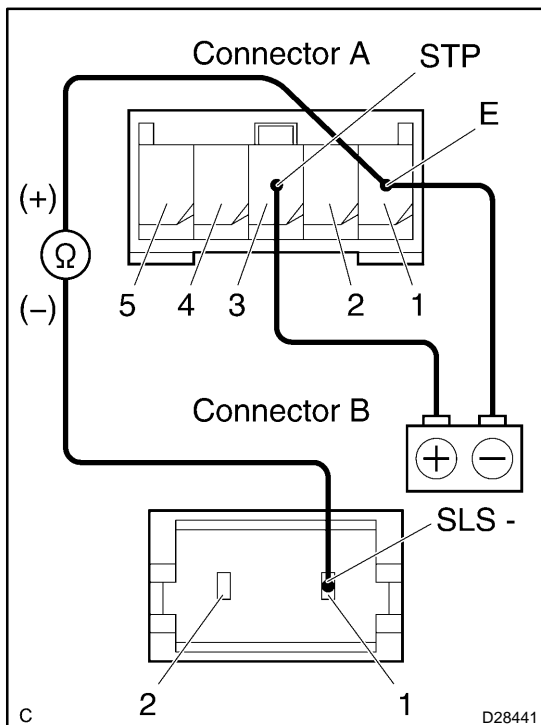

- (c) Connect terminal STP to the battery positive (+) terminal and terminal E to the battery negative (-) terminal, and apply about 12 V between terminals STP and E.
- (d) Measure the resistance according to the value(s) in the table below.

Terminal	Measuring Condition	Specified Value
A1 (E) – B1 (SLS-)	Connect Battery	Below 1 Ω
A1 (E) – B1 (SLS-)	Disconnect Battery	10 kΩ or higher