

TRANSMISSION CONTROL CABLE ASSY (ATM)


REPLACEMENT

4011S-02

HINT:


COMPONENTS:

- INSTRUMENT PANEL/METER (See page 71-7)
 - FLOOR SHIFT ASSY (See page 40-35)
1. REMOVE CONSOLE BOX REAR COVER
 2. REMOVE CONSOLE BOX CARPET
 3. REMOVE CONSOLE BOX SUB-ASSY REAR (see page 40-37)
 4. REMOVE EXHAUST PIPE ASSY FRONT (see page 15-3)
 5. REMOVE FRONT FLOOR HEAT INSULATOR NO.1
 6. REMOVE AIR CLEANER ASSY

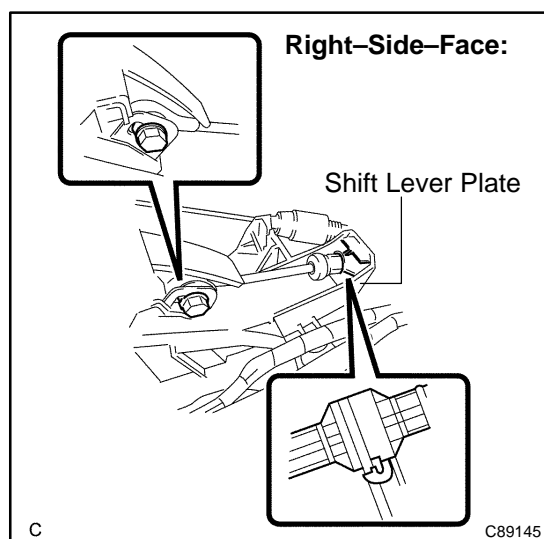


7. DISCONNECT TRANSMISSION CONTROL CABLE ASSY


- (a) Remove the nut, disconnect the transmission control cable assy from the floor shift assy.
- (b) Using a screwdriver, disconnect the transmission control cable assy from the shift lever plate.

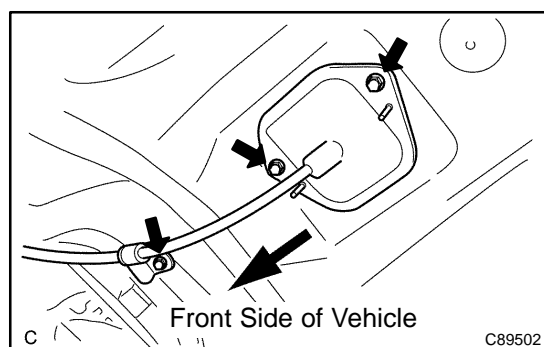


- (c) Remove the 3 bolts.
- (d) Pull out the transmission control cable assy from the body.

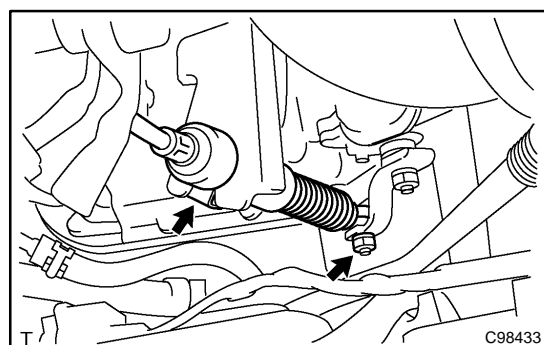


- (e) Remove the nut and disconnect the transmission control cable assy from the control shaft lever.
- (f) Remove the clip and disconnect the transmission control cable assy from the control cable bracket.

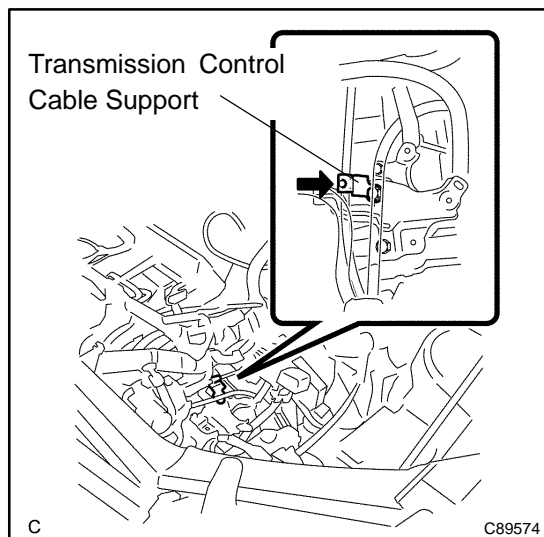


- (g) Disconnect the transmission control cable assy from the transmission control cable support.

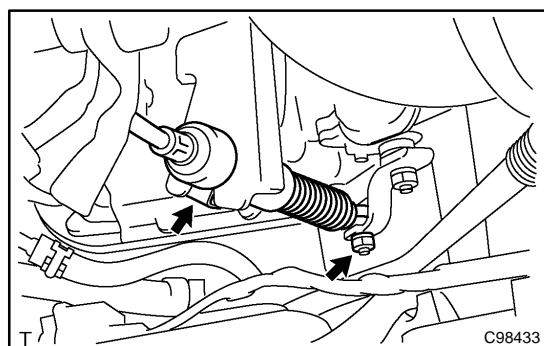


- 8. CONNECT TRANSMISSION CONTROL CABLE ASSY**
- (a) Temporarily install the transmission control cable assy on the control shaft lever with the nut.
 - (b) Connect the transmission control cable assy with a new clip on the bracket.

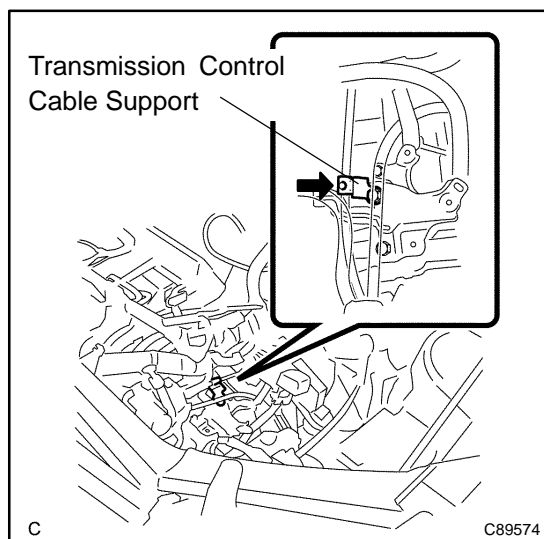

- (c) Connect the transmission control cable assy to the transmission control cable support.

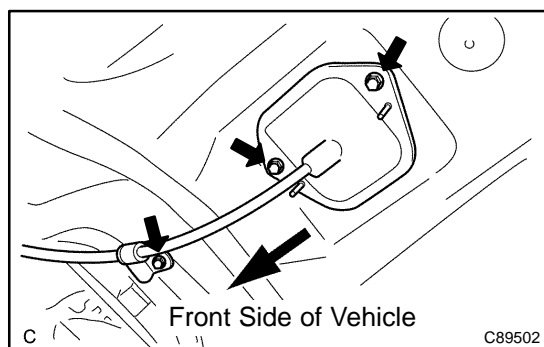

- (d) Install the transmission control cable assy on the body with the 3 bolts.
Torque: 5.0 N·m (51 kgf·cm, 44 in.-lbf)

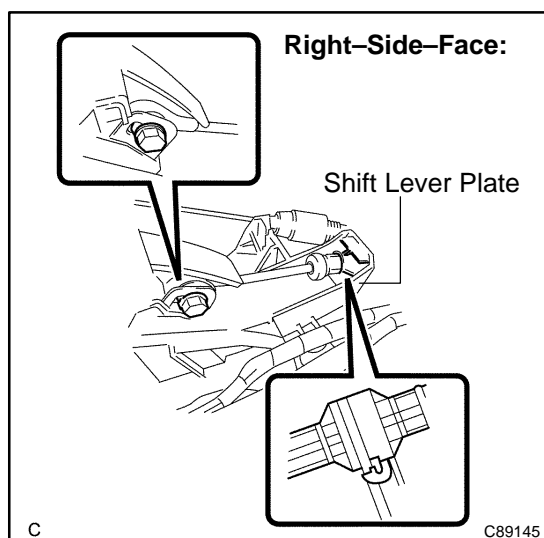

- (e) Connect the transmission control cable assy on the shift lever plate.
- (f) Temporarily install the transmission control cable assy on the floor shift assy.

Torque: 12 N·m (122 kgf·cm, 9 ft·lbf)

9. **INSTALL AIR CLEANER ASSY**
10. **INSTALL FRONT FLOOR HEAT INSULATOR NO.1**
Torque: 5.5 N·m (56 kgf·cm, 49 ft·lbf)
11. **INSTALL EXHAUST PIPE ASSY FRONT** (see page 15-3)
12. **ADJUST SHIFT LEVER POSITION** (see page 40-46)
13. **INSPECT SHIFT LEVER POSITION** (see page 40-46)
14. **INSTALL CONSOLE BOX SUB-ASSY REAR**
15. **INSTALL CONSOLE BOX CARPET**
16. **INSTALL CONSOLE BOX REAR COVER**