


# TRANSMISSION REVOLUTION SENSOR (ATM)

## REPLACEMENT


40147-01

### 1. REMOVE AIR CLEANER ASSY

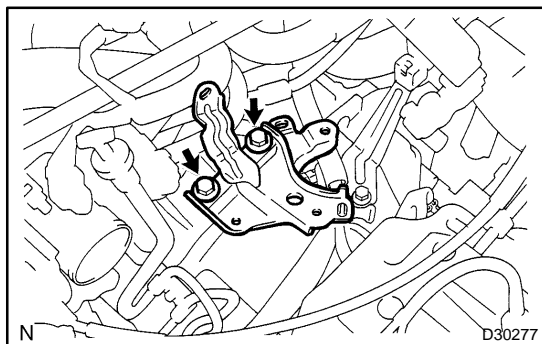


### 2. REMOVE AIR CLEANER BRACKET

- (a) Disconnect wire harness clamp.
- (b) Remove the 2 bolts and air cleaner bracket.

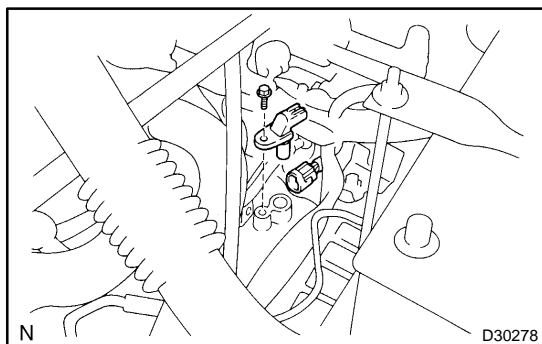


### 3. REMOVE TRANSMISSION REVOLUTION SENSOR

- (a) Disconnect the connector.
- (b) Remove the bolt and transmission revolution sensor.

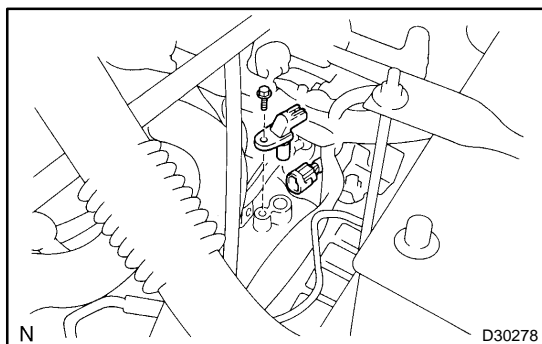

### 4. INSTALL TRANSMISSION REVOLUTION SENSOR

- (a) Coat the O-ring with ATF.
- (b) Install the transmission revolution sensor with the bolt.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**
- (c) Connect the connector.

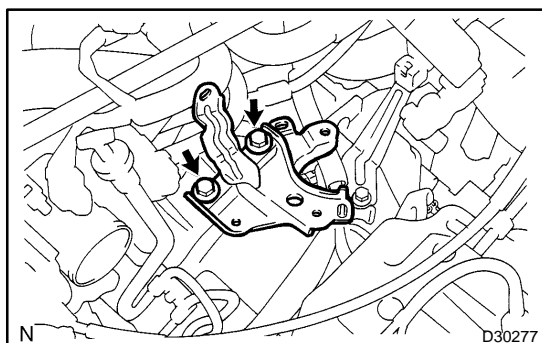

### 5. INSTALL AIR CLEANER BRACKET

- (a) Install the air cleaner bracket with the 2 bolts.  
**Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)**
- (b) Connect the wire harness clamp to the air cleaner bracket.

### 6. INSTALL AIR CLEANER ASSY