



# MANUAL TRANSAXLE ASSY (MTM) COMPONENTS

410F0-01

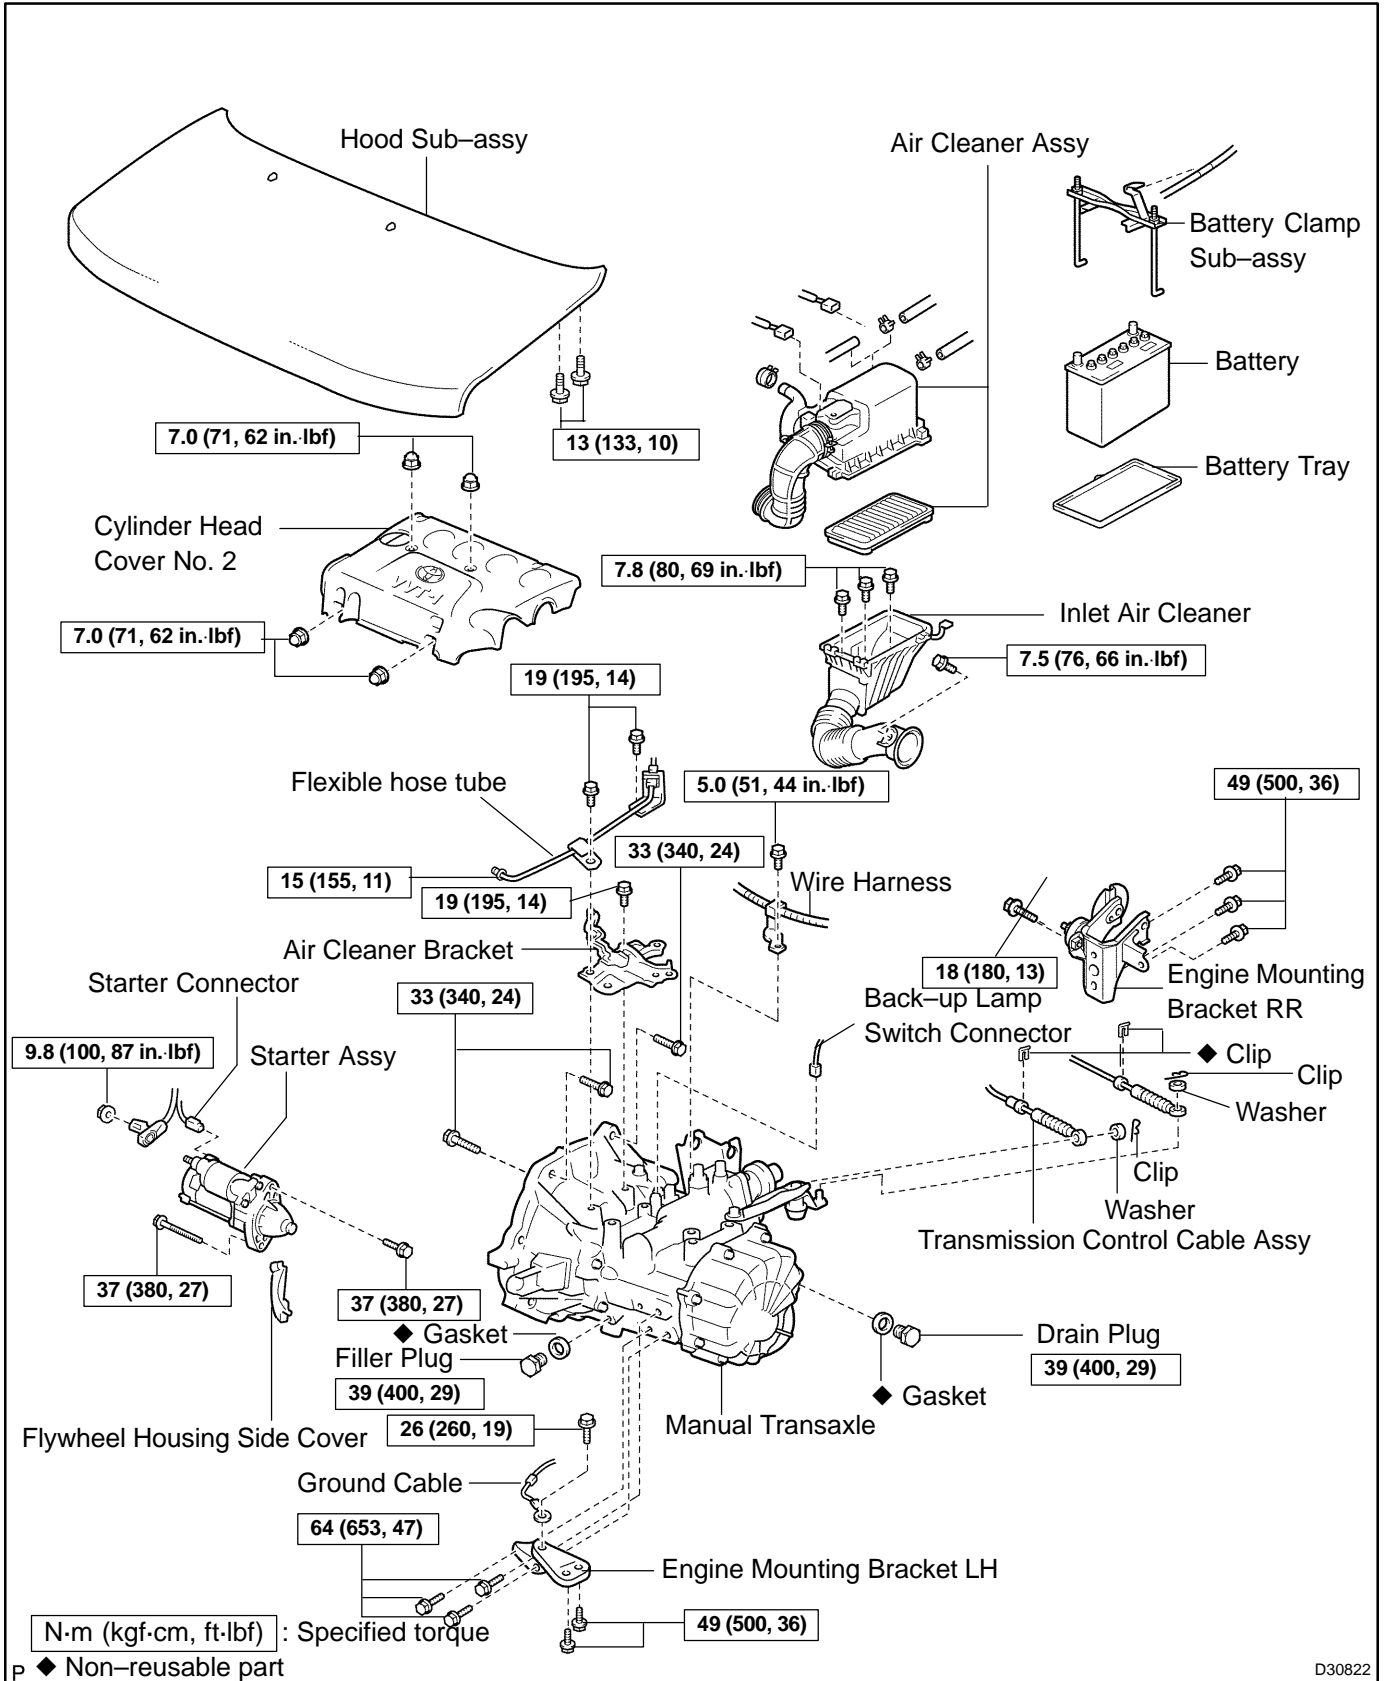

D30822

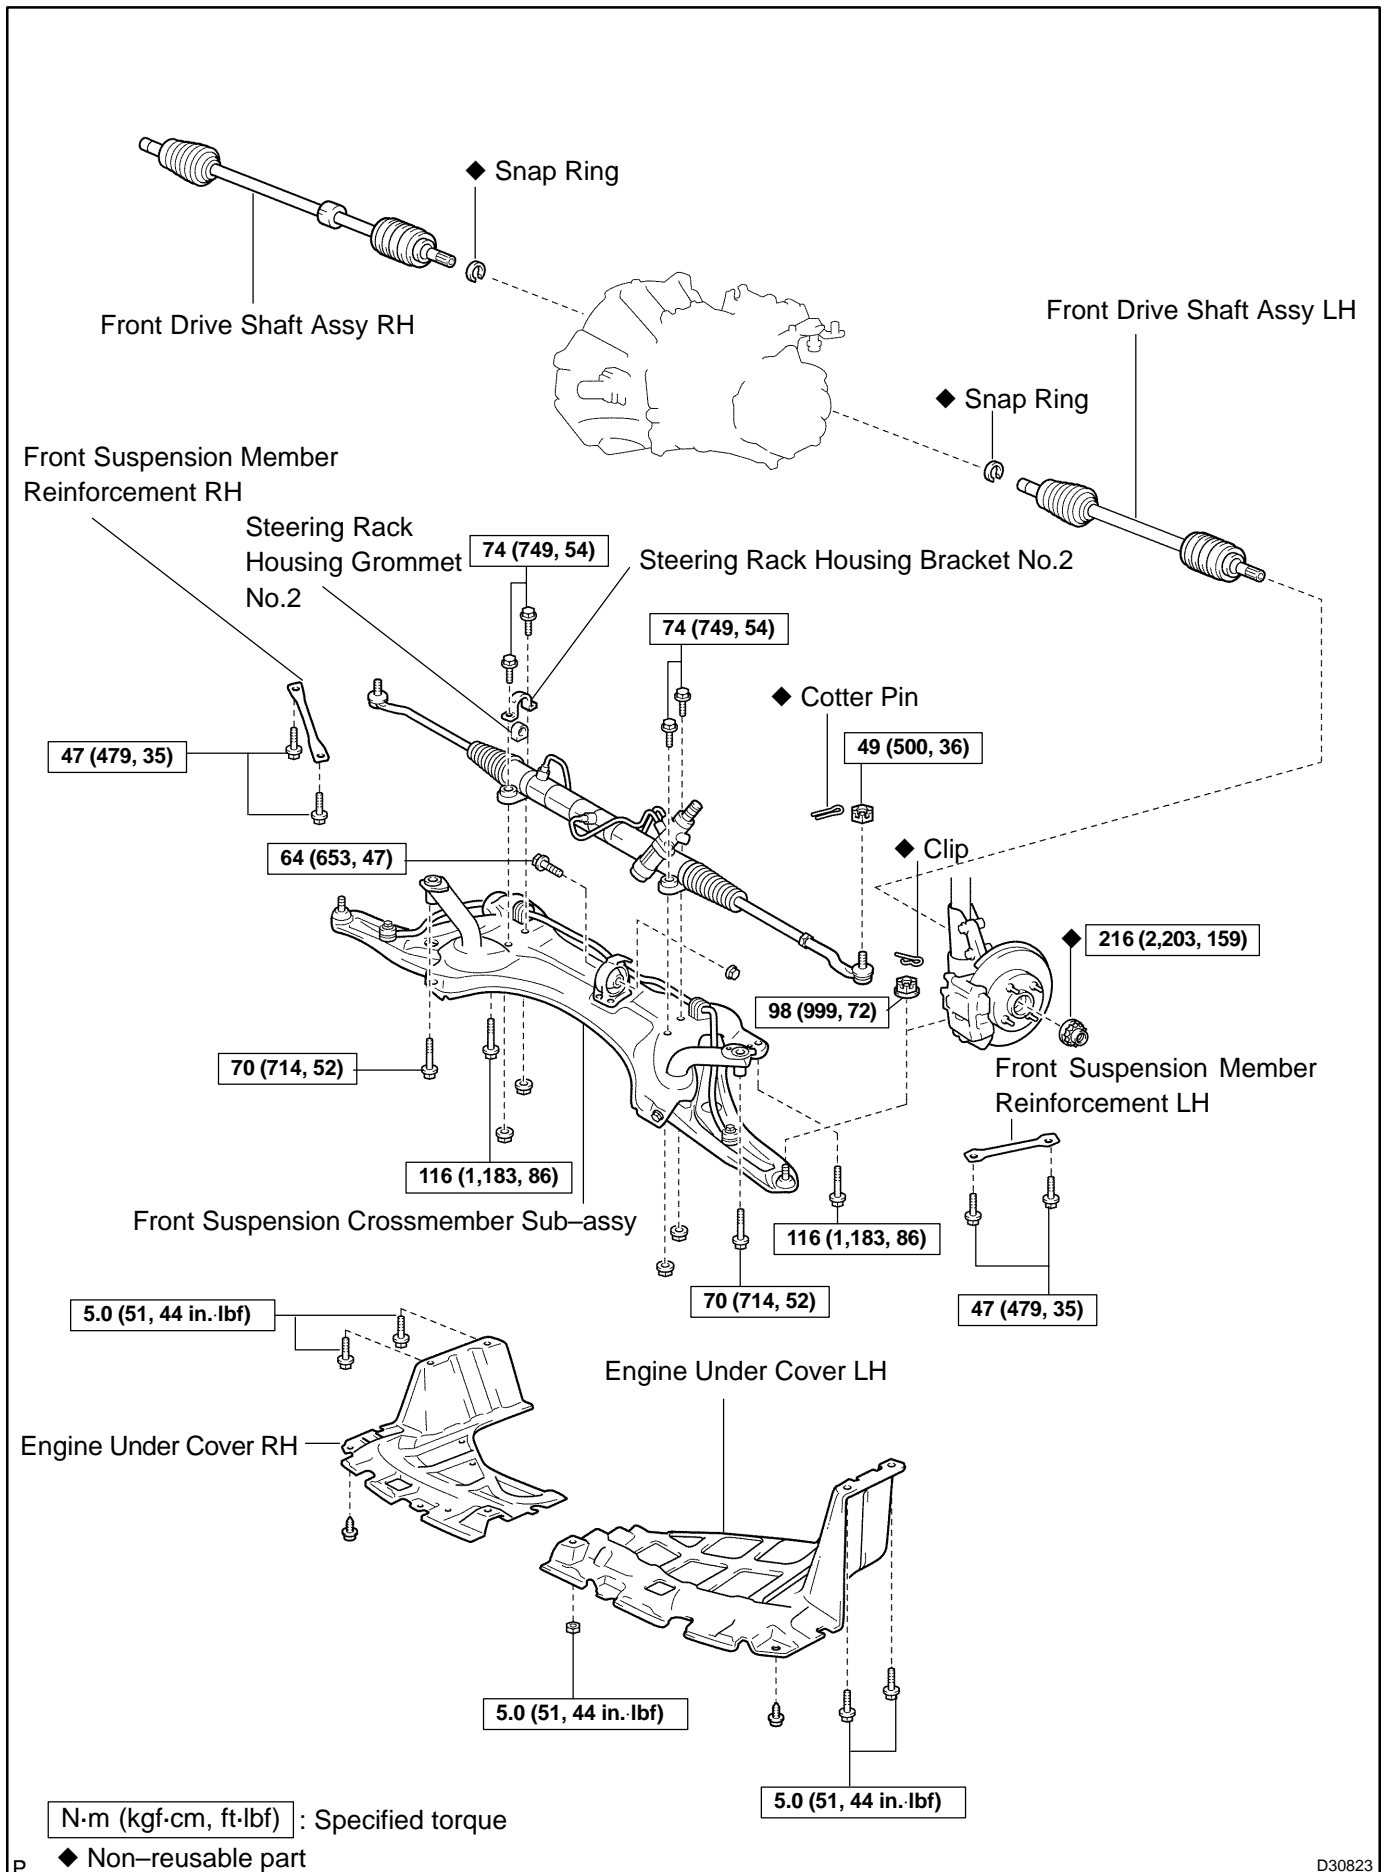

D30823