

# MANUAL TRANSAXLE SYSTEM (MTM)

410EU-01

## PROBLEM SYMPTOMS TABLE

Use the table below, with suspected areas listed in numerical order, to determine the cause of the problem. Inspect and repair or replace parts as necessary according to the steps on the following pages.

Symptom	Suspected Area	See page
Noise	6. Oil (Level low)	41-2
	7. Oil (Wrong)	41-2
	8. Gear (Worn or damaged)	41-58 41-68
	9. Bearing (Worn or damaged)	41-58 41-68
Oil leakage	1. Oil (Level too high)	41-2
	2. Gasket (Damaged)	41-24
	3. Oil seal (Worn or damaged)	41-3
	4. O-Ring (Worn or damaged)	41-24
Hard to shift or will not shift	1. Control cable (Faulty)	41-9
	2. Synchronizer ring (Worn or damaged)	41-58 41-68
	3. Shift key spring (Damaged)	41-58 41-68
Jumps out of gear	1. Locking ball spring (Damaged)	41-24
	2. Shift fork (Worn)	41-24
	3. Gear (Worn or damaged)	41-58 41-68
	4. Bearing (Worn or damaged)	41-58 41-68