

TRANSMISSION CONTROL CABLE ASSY (MTM)


REPLACEMENT

410EZ-01

HINT:


COMPONENTS: See page 41-5

1. REMOVE FRONT FLOOR HEAT INSULATOR NO.1
2. REMOVE SHIFT LEVER KNOB SUB-ASSY (See page 71-21)
3. REMOVE CONSOLE BOX SUB-ASSY REAR (See page 71-21)

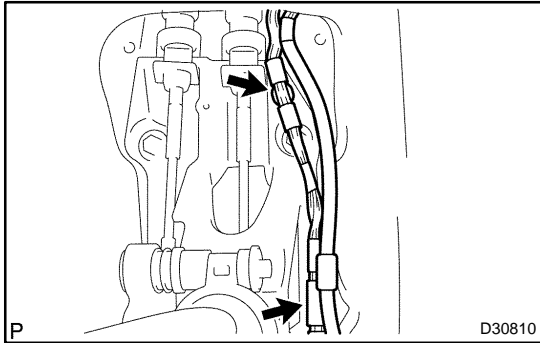


4. SEPARATE FLOOR SHIFT SHIFT LEVER ASSY

- (a) Separate the wire harness.

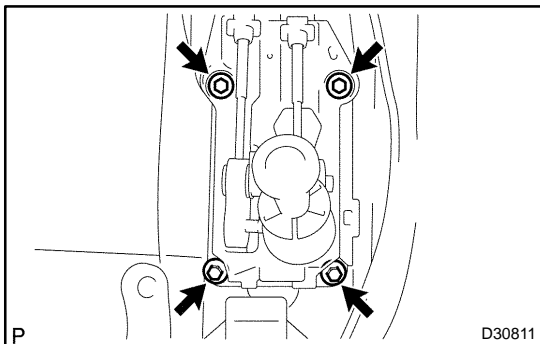


- (b) Remove the 4 bolts and separate the floor shift shift lever assy.

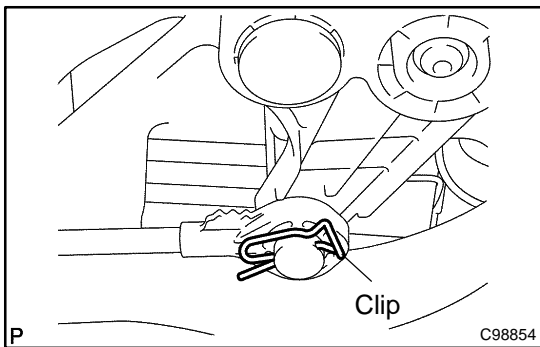


5. REMOVE TRANSMISSION CONTROL CABLE ASSY


- (a) Remove the clip, and separate the cable end of the transmission control select cable from the floor shift shift lever assy.

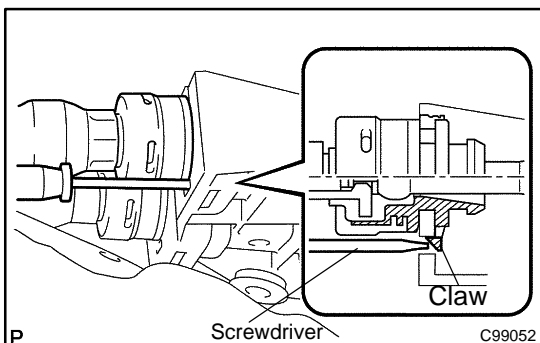


- (b) Using a screwdriver, release the claw.
- (c) Separate the transmission control select cable from the shift lever retainer.

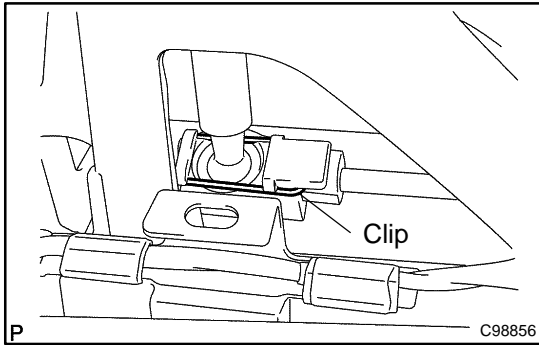


- (d) Remove the clip, and separate the cable end of the transmission control shift cable from the floor shift shift lever assy.

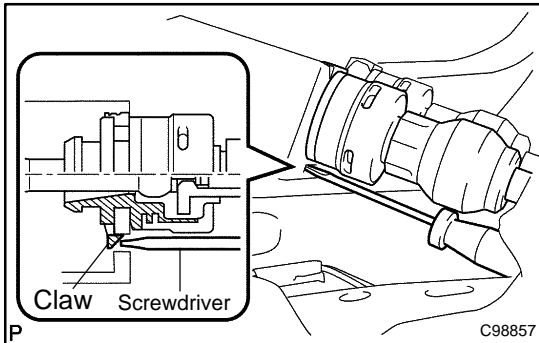


- (e) Using a screwdriver, release the claw.
 (f) Separate the transmission control shift cable from the floor shift shift lever assy.

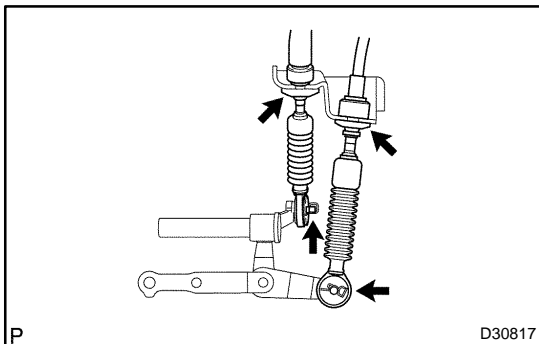


- (g) Remove the 2 clips and the 2 washers, and separate the 2 cables from the manual transaxle.
 (h) Remove the 2 clips, and separate the 2 cables from the control cable bracket.

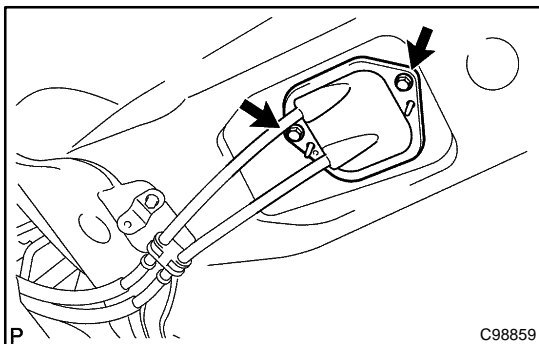


- (i) Remove the 2 bolts and the retainer from the floor.

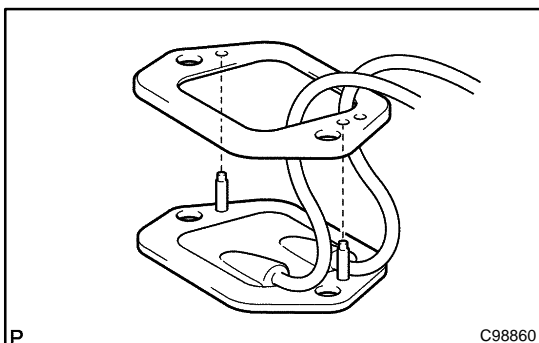

- (j) Remove the retainer from the grommet.
 (k) Remove the transmission control select cable from the grommet.

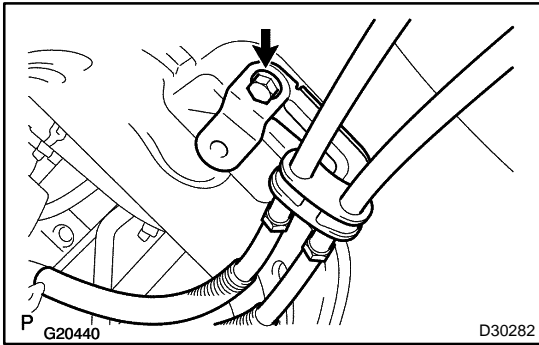


- (l) Remove the bolt and the clamp.
- (m) Pull out the transmission control select cable and transmission control shift cable through the floor hole.

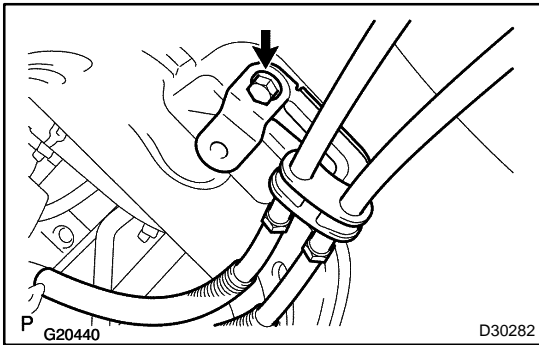

6. INSTALL TRANSMISSION CONTROL CABLE ASSY


- (a) Install the clamp with the bolt.
Torque: 5.0 N·m (51 kgf·cm, 44 in.-lbf)
- (b) Push in the transmission control select cable and transmission control shift cable through the floor hole and the retainer.
- (c) Install the transmission control cable assy on the grommet.

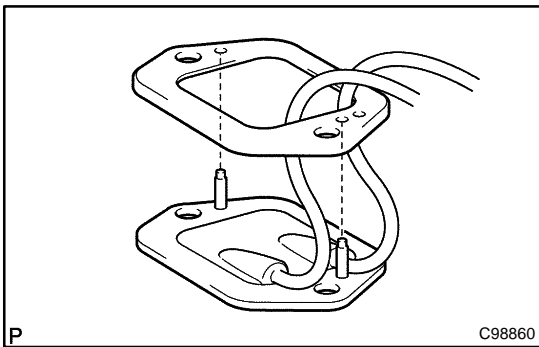


- (d) Install the retainer on the grommet.

NOTICE:


Fit the projections of the grommet into the hole of the retainer.

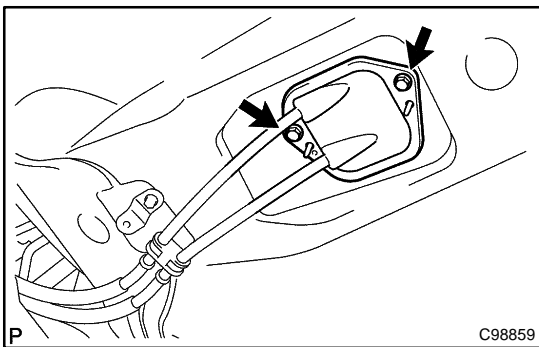

- (e) Install the retainer on the floor with the 2 bolts.
Torque: 5.0 N·m (51 kgf·cm, 44 in.-lbf)
- (f) Connect the transmission control cable assy to the floor shift shift lever assy.

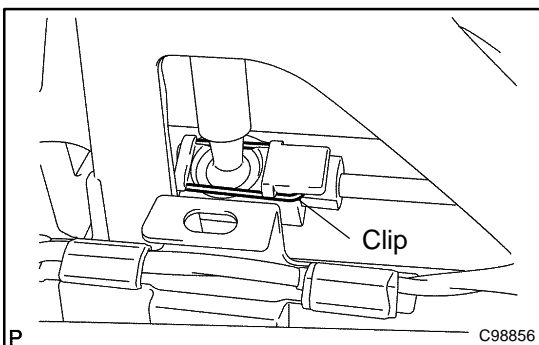


- (g) Connect the end of the transmission control shift cable to the floor shift shift lever assy.

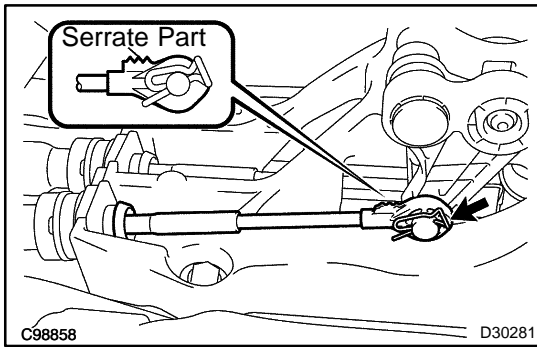


- (h) Connect the end of the transmission control select cable to the floor shift lever assy and install the clip.

NOTICE:


- The serrate part of the select cable point should face upward when the select cable point is connected.
- The clip should be inserted in the direction as shown in the illustration.

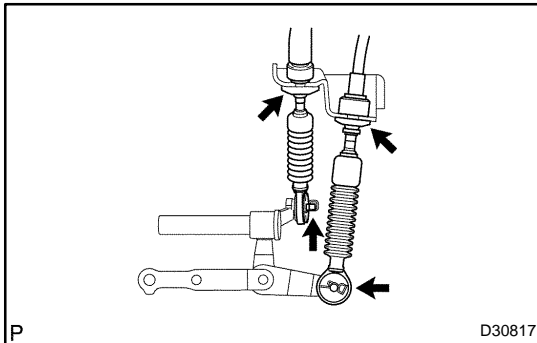

- (i) Connect the 2 cable ends, and install the 2 washers and the 2 clips.
 (j) Install 2 new clips on the control cable bracket.

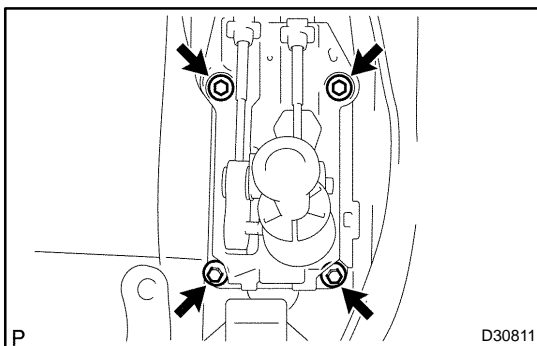**7. INSTALL FLOOR SHIFT SHIFT LEVER ASSY**

- (a) Install the floor shift shift lever assy with the 4 bolts.
Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

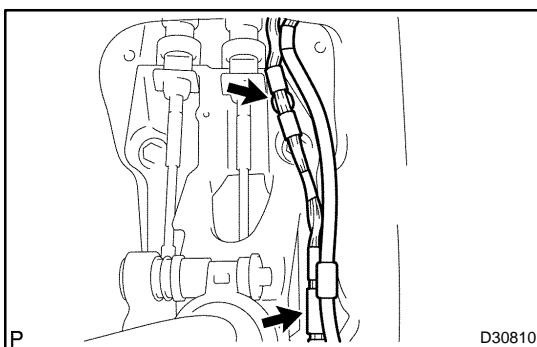

- (b) Install the wire harness.

8. INSTALL CONSOLE BOX SUB-ASSY REAR (See page 71-21)

9. INSTALL SHIFT LEVER KNOB SUB-ASSY (See page 71-21)

10. INSTALL FRONT FLOOR HEAT INSULATOR NO.1

Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)