


# INSPECTION

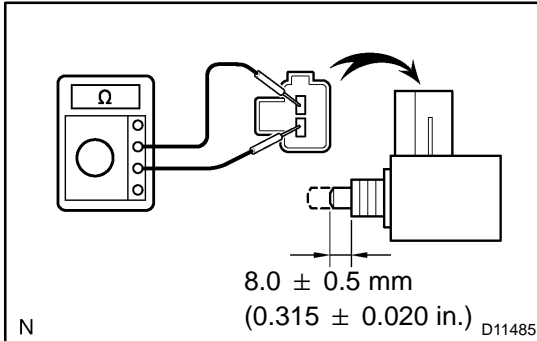

## 1. INSPECT CLUTCH START SWITCH ASSY

- (a) Check the continuity between the terminals when the switch is ON and OFF.

Switch position	Condition
ON (pushed)	Continuity
OFF (free)	No continuity