


REPLACEMENT

1. **PRECAUTION** (See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL** (See page 60-1)
3. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER** (See page 71-21)

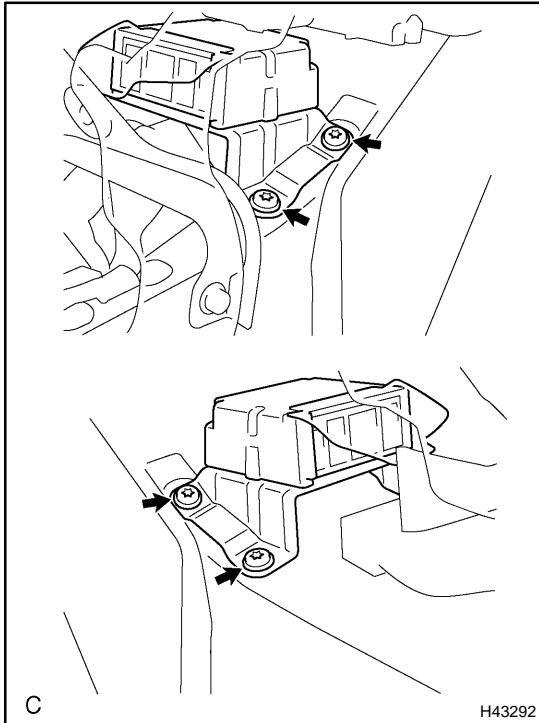

4. REMOVE AIR BAG SENSOR ASSY CENTER

- (a) Disconnect the 3 connectors from the airbag sensor assy center.
- (b) Using a torx socket wrench (T40), remove the 4 torx screws and airbag sensor assy center.

5. INSTALL AIR BAG SENSOR ASSY CENTER

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (–) terminal is disconnected.

NOTICE:

After removing the terminal wait for at least 90 seconds before starting the operation.

- (c) Using a torx socket wrench (T40), install the airbag sensor assy center with the 4 torx screws.

NOTICE:

- If the airbag sensor assy center has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace the airbag sensor assy center with a new one.
 - When installing the airbag sensor assy center, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- (d) Tighten the 4 torx screws to the specified torque.
Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)
 - (e) Connect the connectors to the airbag sensor assy center.
 - (f) Check that there is no looseness in the installation parts of the airbag sensor assy center.
 - (g) Check that the water-proof sheet is properly set.

6. INSPECT SRS WARNING LIGHT (See page 05-451)