


## REPLACEMENT

1. **PRECAUTION** (See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL** (See page 60-1)
3. **REMOVE FRONT SEAT TRACK COVER LH REAR OUTER** (See page 72-2)
4. **REMOVE SEAT TRACK BRACKET COVER INNER LH** (See page 72-2)
5. **REMOVE FRONT SEAT ASSY LH** (See page 72-2)

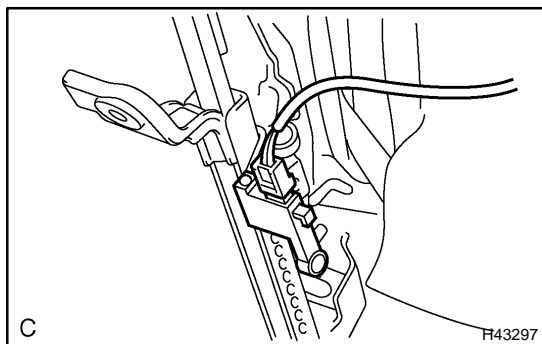

### 6. REMOVE SEAT POSITION AIR BAG SENSOR

- (a) Disconnect the connector of the seat position airbag sensor.
- (b) Using a torx socket wrench (T30), remove the torx screw and seat position airbag sensor.

### 7. INSTALL SEAT POSITION AIR BAG SENSOR

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

#### NOTICE:

After removing the terminal wait for at least 90 seconds before starting the operation.

- (c) Using a torx socket wrench (T30), install the seat position airbag sensor with the torx screw.  
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)

#### NOTICE:

- If the seat position airbag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace the seat position airbag sensor with a new one.
  - When installing the seat position airbag sensor, be careful that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- (d) Connect the connector of the seat position airbag sensor.
  - (e) Check that there is no looseness in the installation parts of the seat position airbag sensor.

### 8. INSTALL FRONT SEAT ASSY LH (See page 61-6)

Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

9. **SRS WARNING LIGHT** (See page 05-451)