


SPIRAL CABLE SUB-ASSY REPLACEMENT

600NB-01

HINT:


COMPONENTS: See page 60-12

1. **PRECAUTION** (See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL** (See page 60-1)
3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
4. **REMOVE HORN BUTTON ASSY** (See page 60-13)
5. **REMOVE STEERING WHEEL ASSY** (See page 50-8)
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)

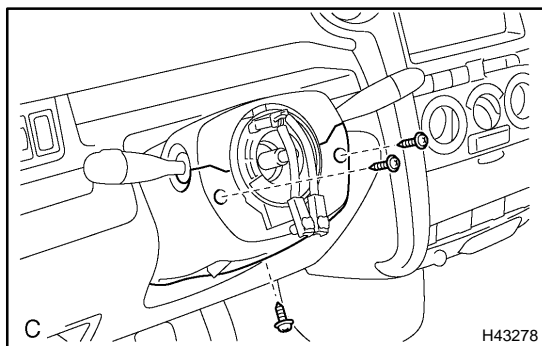

6. REMOVE STEERING COLUMN COVER

- (a) Remove the 3 screws and the steering column cover sub-assy lower.

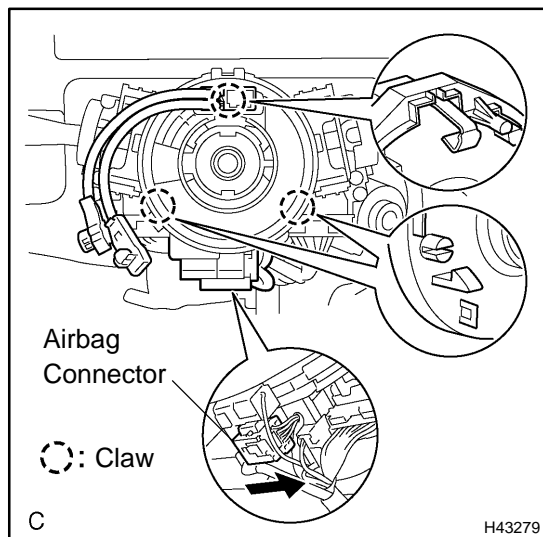

7. REMOVE SPIRAL CABLE SUB-ASSY

- (a) Disconnect the airbag connector and the connector from the spiral cable sub-assy.
- (b) Disengage the 3 claws and remove the spiral cable sub-assy.

8. INSPECT SPIRAL CABLE SUB-ASSY (See page 60-9)

- (a) If the following condition is identified, replace the spiral cable sub-assy with a new one.

Condition:

Scratches or cracks on the connector

Cracks, dents or chips in the spiral cable sub-assy

9. PLACE FRONT WHEELS FACING STRAIGHT AHEAD

- (a) Check that the front wheels are facing straight ahead.

10. INSTALL SPIRAL CABLE SUB-ASSY

- (a) Set the turn signal switch to the neutral position.

NOTICE:

Make sure that the turn signal switch is in the neutral position since the pin of the turn signal switch may be snapped.

- (b) Engage the 3 claws and install the spiral cable sub-assy.

NOTICE:

When replacing the spiral cable sub-assy with a new one, remove the lock pin before installing the steering wheel assy.


- (c) Connect the airbag connector and the connector.
 (d) Install the steering column cover with the 3 screws to the spiral cable sub-assy.

11. ADJUST SPIRAL CABLE SUB-ASSY


- (a) Check that the ignition switch is off.
 (b) Check that the battery negative terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

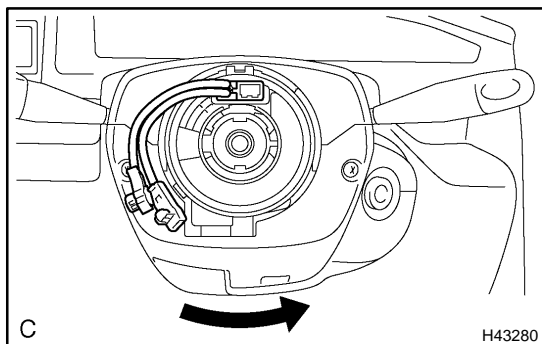

- (c) Turn the spiral cable sub-assy counterclockwise slowly by hand until it feels firm.

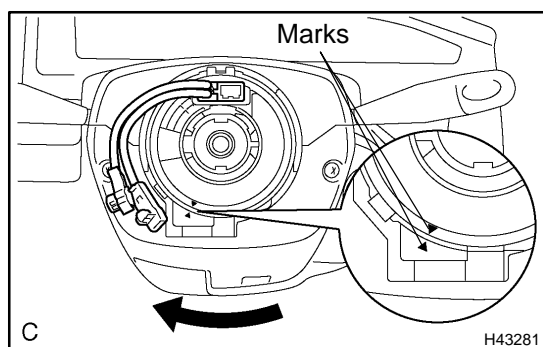

- (d) Then rotate the spiral cable sub-assy clockwise about 2.5 turns to align the marks.

HINT:

The spiral cable sub-assy will rotate about 2.5 turns to both left and right of the center.

12. INSTALL STEERING WHEEL ASSY (See page 50-8)**13. INSPECT STEERING WHEEL CENTER POINT****14. INSTALL HORN BUTTON ASSY (See page 60-13)****15. INSPECT HORN BUTTON ASSY (See page 60-9)****16. INSPECT SRS WARNING LIGHT (See page 05-451)**