


INSPECTION

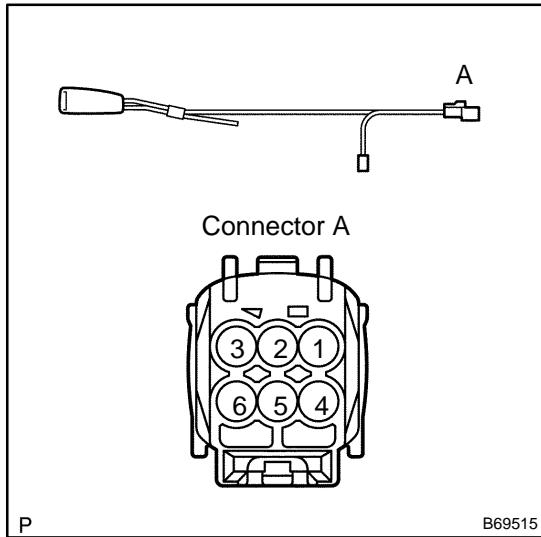

1. INSPECT FRONT SEAT INNER BELT ASSY RH

- (a) Check the buckle switch.
 - (1) Fasten the seat belt (Buckle switch is ON).
 - (2) Check the resistance between the terminals.

Standard:


Tester Connection	Specified Condition
A-1 - A-3	1,330 Ω

- (3) Release the seat belt (Buckle switch is OFF).
- (4) Check the resistance between the terminals.

Standard:

Tester Connection	Specified Condition
A-1 - A-3	330 Ω

If the result is not as specified, replace the inner belt assy.

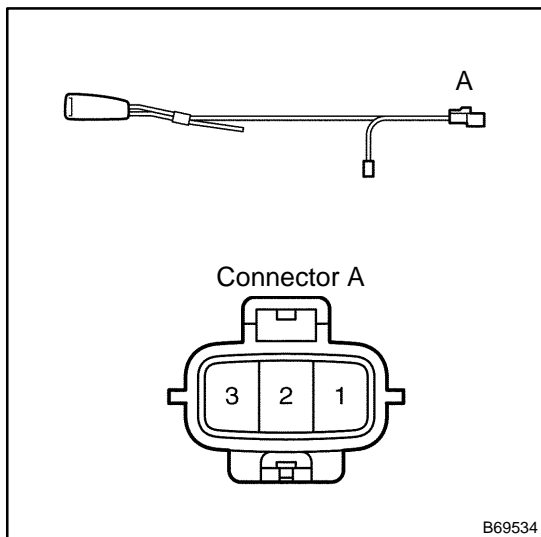

2. INSPECT FRONT SEAT INNER BELT ASSY LH

- (a) Check the buckle switch.
 - (1) Fasten the seat belt (Buckle switch is ON).
 - (2) Check the resistance between the terminals.

Standard:


Tester Connection	Specified Condition
A-1 - A-3	Below 1 Ω

- (3) Release the seat belt (Buckle switch is OFF).
- (4) Check the resistance between the terminals.

Standard:

Tester Connection	Specified Condition
A-1 - A-3	10 KΩ or higher

If the result is not as specified, replace the inner belt assy.

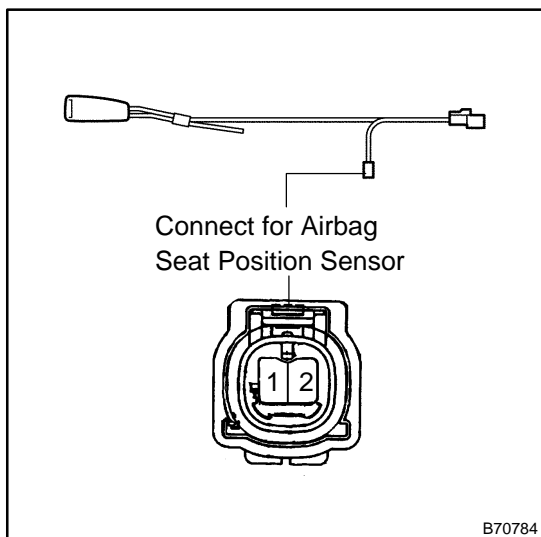

- (b) Check the circuit for the airbag seat position sensor.

- (1) Check the resistance between the terminals.

Standard:

Tester Connection	Specified Condition
1 - 2 (Connector for airbag seat position sensor)	Below 1 Ω

If the result is not as specified, replace the inner belt assy.