

PROBLEM SYMPTOMS TABLE

HINT:

Use the table below, with suspected areas listed in numerical order, to determine the cause of the problem. Inspect and replace or repair parts as necessary according to the steps on the following pages.

1. HEADLAMP AND TAIL LAMP

Symptom	Suspected Area	See page
"LO-Beam" does not come on (One side).	1. Bulb 2. H-LP LH/H-LP LO RH fuse 3. Wire harness	- - -
"LO-Beam" does not come on (All).	1. Headlamp dimmer switch assy 2. Wire harness	65-6 -
"HI-Beam" does not come on (One side).	1. Bulb 2. H-LP LH/H-LP LO RH fuse 3. Wire harness	- - -
"HI-Beam" does not come on (All).	1. Headlamp dimmer switch assy 2. Wire harness	65-6 -
"Flash" does not operate (All).	1. Headlamp dimmer switch assy 2. Wire harness	65-6 -
Headlamp is dark.	1. Bulb 2. Wire harness	- -
Only one tail lamp comes on.	1. Bulb 2. Wire harness	- -
Both tail lamps do not come on (Headlamps are normal).	1. TAIL fuse 2. Headlamp dimmer switch assy 3. Wire harness	- 65-6 -
Both tail lamps do not come on (Headlamps do not come on).	1. Headlamp dimmer switch assy 2. Wire harness	65-6 -

2. TURN SIGNAL AND HAZARD WARNING SYSTEM

Symptom	Suspected Area	See page
"Hazard" and "Turn" do not come on.	1. HAZ fuse 2. Turn signal flasher relay 3. Wire harness	- 65-4 -
Hazard warning lamp does not come on (Turn is normal).	1. Hazard warning signal switch assy 2. Turn signal flasher relay 3. Wire harness	65-6 65-4 -
Turn signal does not come on (Hazard is normal).	1. Turn signal switch 2. Turn signal flasher relay 3. Wire harness	65-6 65-4 -
Turn signal does not come on in one direction.	1. Turn signal switch 2. Turn signal flasher relay 3. Wire harness	65-6 65-4 -
Only one bulb comes on.	1. Bulb 2. Wire harness	- -

3. STOP LAMP SYSTEM

Symptom	Suspected Area	See page
Both stop lamps do not come on.	1. STOP fuse	-
	2. Stop lamp switch assy	65-6
	3. Wire harness	-
Stop lamp always remains on.	1. Stop lamp switch assy	65-6
	2. Wire harness	-
Stop lamp dose not come on (One side).	1. Bulb	-
	2. Wire harness	-

4. BACK UP LAMP SYSTEM

Symptom	Suspected Area	See page
Both back up lamps do not come on.	1. GAUGE fuse	-
	2. Back up lamp switch assy (M/T)	65-6
	3. Park/neutral position switch assy (A/T)	65-6
	4. Wire harness	-
Both back up lamps remain always ON.	1. Back up lamp switch assy (M/T)	65-6
	2. Park/neutral position switch assy (A/T)	65-6
	3. Wire harness	-
Back up lamp does not come on (One side).	1. Bulb	-
	2. Wire harness	-

5. INTERIOR LAMP SYSTEM

Symptom	Suspected Area	See page
Interior lamp does not come on.	1. DOME fuse	-
	2. Wire harness	-
Room lamp assy No.1 does not come on	1. Bulb	-
	2. Room lamp assy No.1	65-6
	3. Wire harness	-