


REAR SIDE MARKER LAMP ASSY LH REPLACEMENT

650UY-01

1. REMOVE REAR BUMPER SIDE SEAL LH (See page 76-5)
2. REMOVE REAR BUMPER SIDE SEAL RH (See page 76-5)
3. REMOVE REAR BUMPER PROTECTOR LH (See page 76-5)
4. REMOVE REAR BUMPER PROTECTOR RH (See page 76-5)
5. REMOVE REAR BUMPER PIECE LH (See page 76-5)
6. REMOVE REAR BUMPER PIECE RH (See page 76-5)
7. REMOVE REAR BUMPER COVER (See page 76-5)

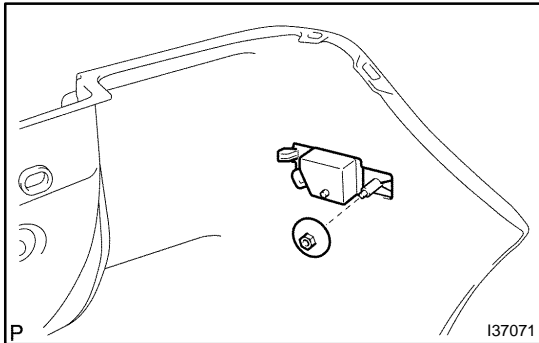

8. REMOVE REAR SIDE MARKER LAMP ASSY LH
 - (a) Disconnect the connector.
 - (b) Remove the nut and the rear side marker lamp assy LH.

9. INSTALL REAR BUMPER COVER (See page 76-5)
10. INSTALL REAR BUMPER SIDE SEAL LH (See page 76-5)
11. INSTALL REAR BUMPER SIDE SEAL RH (See page 76-5)