



# SIDE TURN SIGNAL LAMP ASSY LH OVERHAUL

650US-01

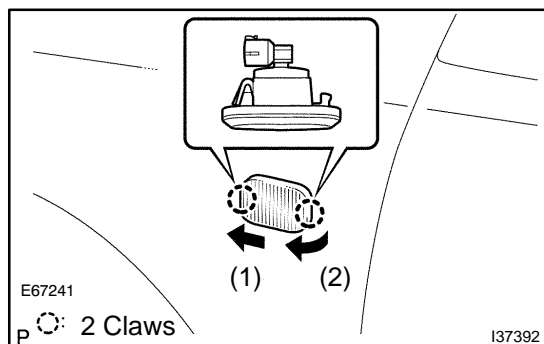

## 1. REMOVE SIDE TURN SIGNAL LAMP ASSY LH

- (a) Disconnect the side turn signal lamp assy LH as shown in the illustration.
- (b) Disconnect the connector and remove the side turn signal lamp assy LH.

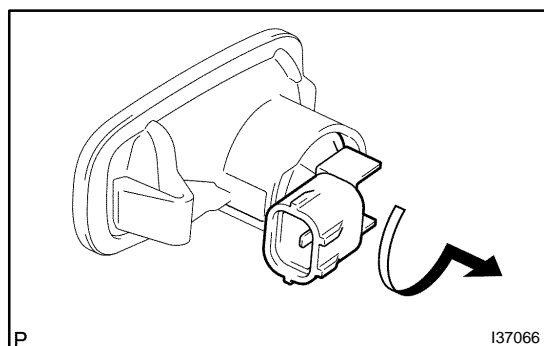

## 2. REMOVE SIDE TURN SIGNAL LAMP BULB

- (a) Remove the side turn signal lamp bulb and side turn signal lamp socket and wire as shown in the illustration.
- (b) Remove the side turn signal lamp bulb from the side turn signal lamp socket and wire.

## 3. REMOVE SIDE TURN SIGNAL LAMP SOCKET AND WIRE

## 4. REMOVE SIDE TURN SIGNAL LAMP LENS LH