

# WIPER AND WASHER SYSTEM

## PROBLEM SYMPTOMS TABLE

660E7-01

### HINT:

Use the table below, with suspected areas listed in numerical order, to determine the cause of the problem. Inspect and repair or replace parts as necessary according to the steps on the following pages.

### 1. WIPER AND WASHER SYSTEM

Symptom	Suspected Area	See page
Front wipers do not operate.	<ol style="list-style-type: none"> <li>4. WIPER Fuse</li> <li>5. Windshield Wiper Switch Assy</li> <li>6. Windshield Wiper Motor Assy</li> <li>7. Wire Harness</li> </ol>	<p>–</p> <p>66-3</p> <p>66-3</p> <p>–</p>
Front wipers do not operate in the LO or HI position.	<ol style="list-style-type: none"> <li>1. Windshield Wiper Switch Assy</li> <li>2. Windshield Wiper Motor Assy</li> <li>3. Wire Harness</li> </ol>	<p>66-3</p> <p>66-3</p> <p>–</p>
Front wipers do not operate in the INT position.	<ol style="list-style-type: none"> <li>1. Windshield Wiper Switch Assy</li> <li>2. Windshield Wiper Motor Assy</li> <li>3. Wire Harness</li> </ol>	<p>66-3</p> <p>66-3</p> <p>–</p>
Front washer motor does not operate.	<ol style="list-style-type: none"> <li>1. WIPER Fuse</li> <li>2. Windshield Wiper Switch Assy</li> <li>3. Washer Motor</li> <li>4. Wire Harness</li> </ol>	<p>–</p> <p>66-3</p> <p>66-2</p> <p>–</p>
Front wipers do not operate when washer switch is in the ON position.	<ol style="list-style-type: none"> <li>1. Windshield Wiper Switch Assy</li> <li>2. Windshield Wiper Motor Assy</li> <li>3. Wire Harness</li> </ol>	<p>66-3</p> <p>66-3</p> <p>–</p>
Rear wiper and washers do not operate.	<ol style="list-style-type: none"> <li>1. WIPER Fuse</li> <li>2. Rear Wiper Switch</li> <li>3. Wire Harness</li> </ol>	<p>–</p> <p>66-3</p> <p>–</p>
Rear wipers do not operate in the INT position.	<ol style="list-style-type: none"> <li>1. Rear Wiper Switch</li> <li>2. Rear Wiper Motor</li> <li>3. Wire Harness</li> </ol>	<p>66-3</p> <p>66-3</p> <p>–</p>
Rear washer motor does not operate.	<ol style="list-style-type: none"> <li>1. WASH fuse</li> <li>2. Rear Washer Switch</li> <li>3. Washer Motor</li> <li>4. Wire Harness</li> </ol>	<p>–</p> <p>66-3</p> <p>66-2</p> <p>–</p>
Rear washers do not operate when washer switch is in the ON position.	<ol style="list-style-type: none"> <li>1. Rear Wiper Switch</li> <li>2. Rear Wiper Motor</li> <li>3. Wire Harness</li> </ol>	<p>66-3</p> <p>66-3</p> <p>–</p>
Washer fluid does not flow.	<ol style="list-style-type: none"> <li>1. Washer Hose and Nozzle</li> </ol>	<p>–</p>
<ul style="list-style-type: none"> <li>• When the wiper switch is off, the wiper blade does not retract or retracts in the wrong position.</li> <li>• The wiper blade is in contact with the body.</li> </ul>	<ol style="list-style-type: none"> <li>1. Windshield Wiper Motor Assy (Wiper arm and blade set position)</li> </ol>	<p>66-3</p>