

PROBLEM SYMPTOMS TABLE

Use the table below, with suspected areas listed in numerical order, to determine the cause of the problem. Inspect and repair or replace parts as necessary according to the steps on the following pages.

Symptom	Suspected area	See page
No sound can be heard only from the front speaker.	2. Front No.1 speaker assy 3. Wire harness	67-7 -
No sound can be heard only from the tweeter speaker.	1. Front No.2 speaker assy 2. Wire harness	67-9 -
No sound can be heard only from the rear speaker.	1. Rear speaker assy 2. Wire harness	67-10 -