


INSPECTION

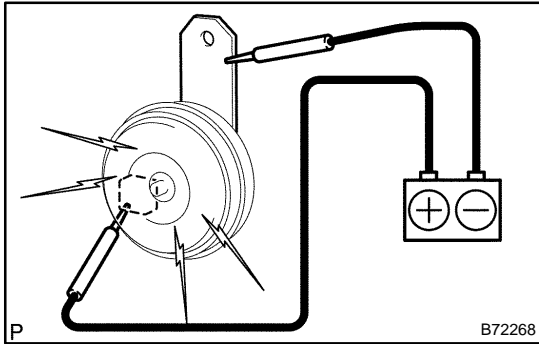


1. INSPECT LOW PITCHED HORN ASSY

- (a) Apply battery voltage to the horn and check operation of the horn.

Standard:

Measurement Condition	Specified Condition
Battery positive (+) \square Terminal 1 Battery positive (-) \square Horn body	Horn sounds

If the result is not as specified, replace the horn assy.

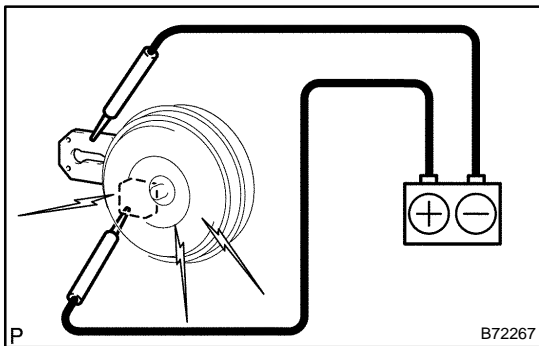


2. INSPECT HIGH PITCHED HORN ASSY

- (a) Apply battery voltage to the horn and check operation of the horn.

Standard:

Measurement Condition	Specified Condition
Battery positive (+) \square Terminal 1 Battery positive (-) \square Horn body	Horn sounds

If the result is not as specified, replace the horn assy.

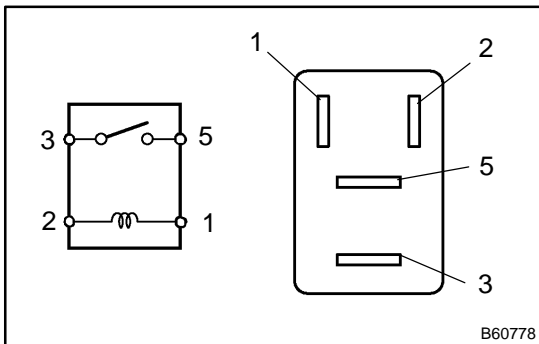

3. INSPECT HORN RELAY ASSY

- (a) Remove the HORN relay from the engine room R/B.
- (b) Check the HORN relay resistance.

Standard:

Tester Connection	Specified Condition
3 - 5	10 k Ω or higher
	Below 1 Ω (When battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay assy.