

OUTER REAR VIEW MIRROR ASSY LH

REPLACEMENT


700W2-01

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- Use the same procedures for the RH side and LH side.


1. REMOVE FRONT DOOR SERVICE HOLE COVER LH (See page 75-7)

- Remove the front door lower frame bracket garnish.
- Remove the door pull handle.
- Remove the power window regulator master switch.
- Remove the front door trim board.
- Remove the front door inside handle.
- Remove the front door trim bracket.
- Remove the front door service hole cover.

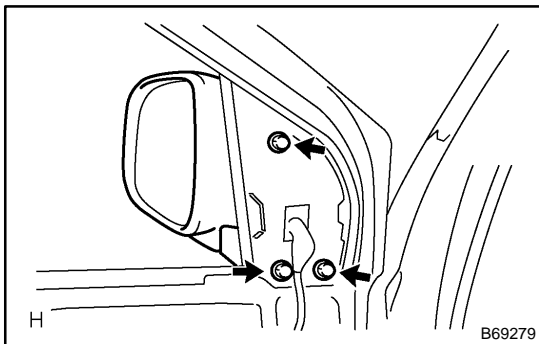

2. REMOVE OUTER REAR VIEW MIRROR ASSY LH

- Disconnect the connector.
- Remove the 3 bolts and mirror.

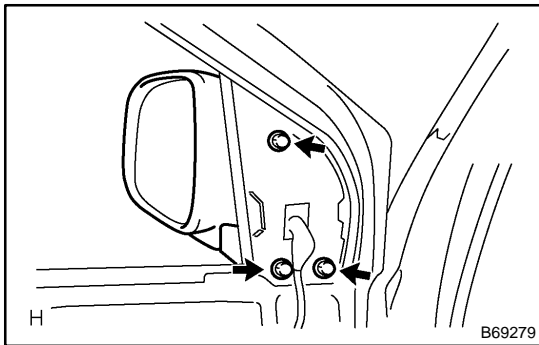

3. INSTALL OUTER REAR VIEW MIRROR ASSY LH

- Install the mirror with the 3 bolts.
Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)