

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See Page
No power window operates	7. GAUGE fuse 8. PWR relay 9. Ignition switch 10. Wire harness	- 70-4 80-2 -
AUTO DOWN function does not operate	1. Power window regulator master switch assy 2. Power window regulator motor assy	70-4 70-4
Only one power window does not operate	1. Power window regulator master switch assy 2. Power window regulator switch assy 3. Power window regulator motor assy 4. Wire harness	70-4 70-4 70-4 -
Window lock system does not operate	1. Power window regulator master switch assy	70-4