


PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See Page
Rear window defogger does not operate (Indicator ON)	<ol style="list-style-type: none"> 1. GAUGE fuse 2. DEF H-fuse 3. Defogger relay 4. Rear window defogger wire 5. Wire harness 	68-1 70-33 70-33 70-33 
Rear window defogger does not operate (Indicator OFF)	<ol style="list-style-type: none"> 1. GAUGE fuse 2. DEF H-fuse 3. Defogger relay 4. Center cluster module 5. Rear window defogger wire 6. Wire harness 	68-1 68-1 70-33 70-33 70-33 