

COMBINATION METER

PROBLEM SYMPTOMS TABLE

71068-04

Warning Lights:

Symptom	Suspected Area	See page
Charge warning light does not come on.	1. Wire Harness or Connector 2. Generator 3. Combination Meter Assy	– 19–18 71–28
Check Engine warning light does not come on.	1. Wire Harness or Connector 2. ECM 3. Combination Meter Assy	– 10–17 71–28
Brake warning light does not come on.	1. Wire Harness or Connector 2. Parking Brake Switch 3. Brake Fluid Level Switch 4. Skid Control ECU 5. Combination Meter Assy	– 05–343 05–343 05–260 71–28
ABS warning light does not come on.	1. Wire Harness or Connector 2. Skid Control ECU 3. Combination Meter Assy	– 05–260 71–28
SRS warning light does not come on.	1. Wire Harness or Connector 2. Airbag Sensor Assy 3. Combination Meter Assy	– 05–447 71–28
Open Door warning light does not come on.	1. Wire Harness or Connector 2. Door Courtesy Light Switch 3. Combination Meter Assy	– 65–6 71–28
Fuel Level warning light does not come on.	1. Wire Harness or Connector 2. Fuel Sender Gauge 3. Combination Meter Assy	– 05–606 71–28
Low Oil Pressure warning light does not come on.	1. Wire Harness or Connector 2. Oil Pressure Switch 3. Combination Meter Assy	– – 71–28

Indicator Lights:

Symptom	Suspected Area	See page
Turn indicator light does not come on.	1. Wire Harness or Connector 2. Turn signal and Hazard Warning System 3. Combination Meter Assy	– 65–4 71–28
A/T Shift indicator lights do not come on.	1. Wire Harness or Connector 2. Neutral Start Switch Circuit 3. ECM 4. Combination Meter Assy	– 05–398 10–17 71–28
O/D OFF indicator light does not come on (A/T).	1. Wire Harness or Connector 2. O/D Main Switch Circuit 3. ECM 4. Combination Meter Assy	– 05–443 10–17 71–28
TEMP HOT indicator light does not come on.	1. Wire Harness or Connector 2. ECM 3. Combination Meter Assy	– 10–17 71–28
TEMP COOL indicator light does not come on.	1. Wire Harness or Connector 2. ECM 3. Combination Meter Assy	– 10–17 71–28
TRAC OFF indicator light does not come on.	1. Wire Harness or Connector 2. Skid Control ECU 3. Combination Meter Assy	– 05–260 71–28

SLIP indicator light does not come on.	1. Wire Harness or Connector 2. Skid Control ECU 3. Combination Meter Assy	– 05-260 71-28
VSC indicator light does not come on.	1. Wire Harness or Connector 2. Skid Control ECU 3. Combination Meter Assy	– 05-260 71-28
High Beam indicator light does not come on.	1. Wire Harness or Connector 2. Headlight Dimmer Switch Assy 3. Combination Meter Assy	– 65-6 71-28

Meter Gauges:

Symptom	Suspected Area	See page
Tachometer, Fuel Gauge and Water Temperature Gauge do not operate.	1. GAUGE Fuse 2. Wire Harness or Connector 3. Combination Meter Assy	– – 71-28
Fuel Gauge does not operate or abnormal operation.	1. Wire Harness or Connector 2. Fuel Sender Gauge 3. Combination Meter Assy	– 05-606 71-28
Oil Maintenance lamp does not operate or abnormal operation.	1. IGN Fuse 2. Wire Harness or Connector 3. Skid Control ECU 4. Combination Meter Assy	– – 05-260 71-28