


HOOD ADJUSTMENT

750PJ-01

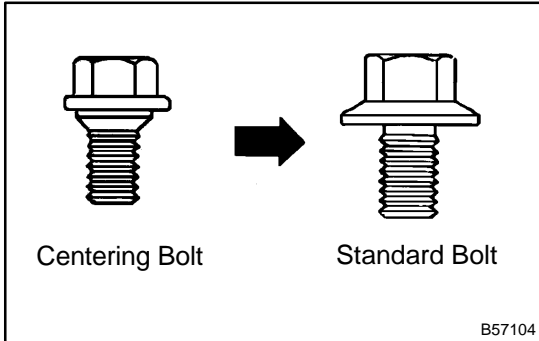


HINT:

Centering bolts are used to the hood hinge and hood lock. The hood and hood lock cannot be adjusted with the centering bolts on. Substitute the centering bolts with standard bolts (w/ washers) when marking adjustments.


1. INSPECT HOOD SUB-ASSY

- (a) Check that the clearance is within the standard range.

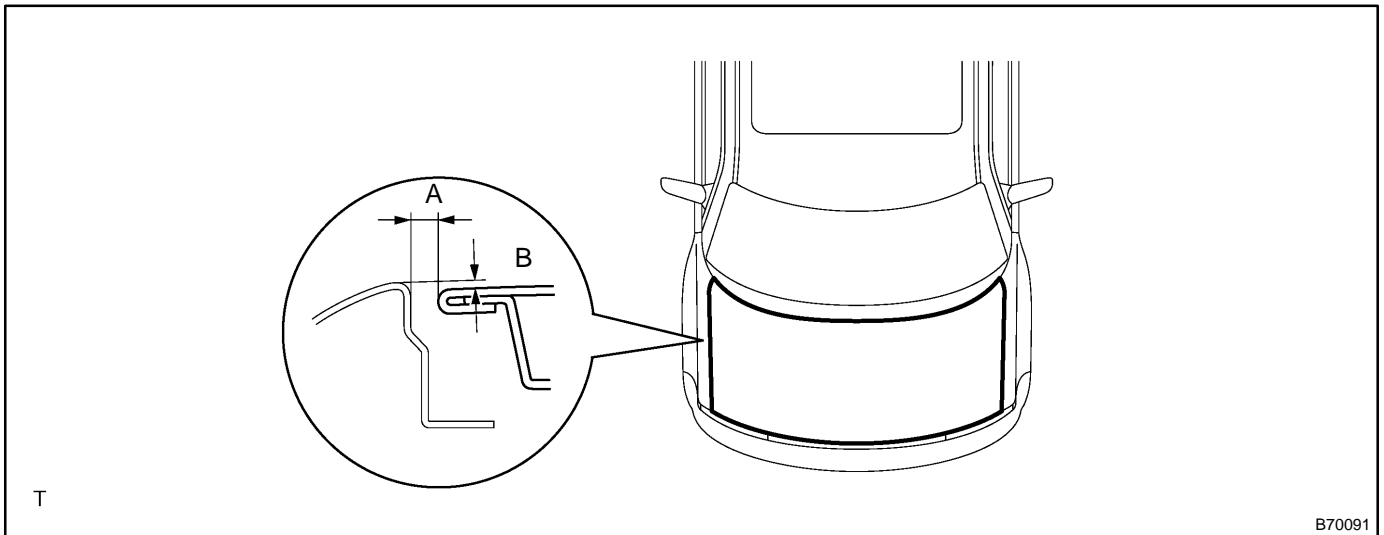


Standard:

Ares	Measurement
A	4.2 ± 1.5 mm (0.165 ± 0.059 in.)
B	0.0 ± 1.5 mm (0.000 ± 0.059 in.)

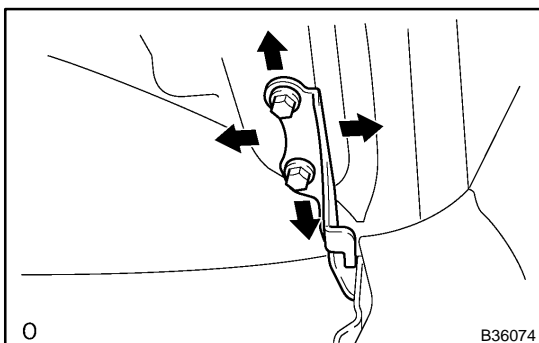

2. ADJUST HOOD SUB-ASSY

- (a) Horizontally and vertically adjust the hood.
 - (1) Loosen the 4 hinge bolts on the hood side.

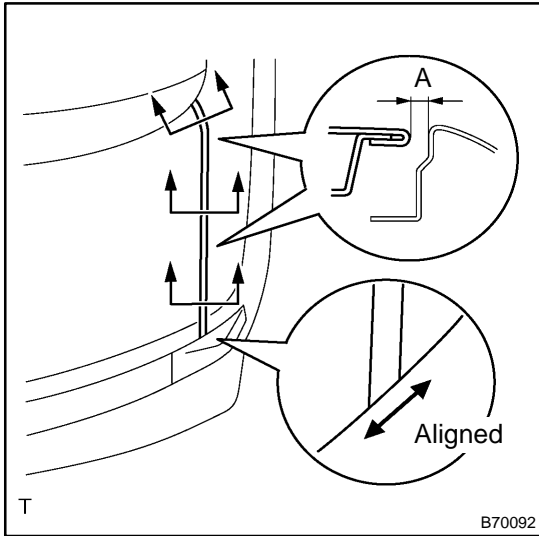


- (2) Adjust the clearance by moving the hood so that it is in the standard range.

Standard range (A): 4.2 ± 1.5 mm (0.165 ± 0.059 in.)

- (3) Tighten the hood side hinge bolts after the adjustment.

Torque: 11.5 N·m (117 kgf·cm, 8.5 ft·lbf)

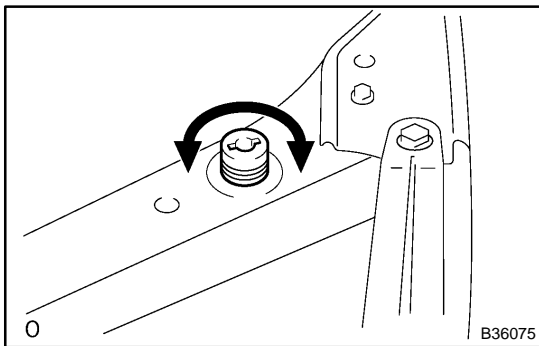

- (b) Adjust the height of the hood front end using the cushion rubber.


- (1) Adjust the cushion rubber so that the hood and the fender is aligned.

HINT:

Raise and lower the cushion rubber by turning it.

- (c) Adjust the hood lock.

- (1) Remove the 3 clips and grille (See page 76-2).

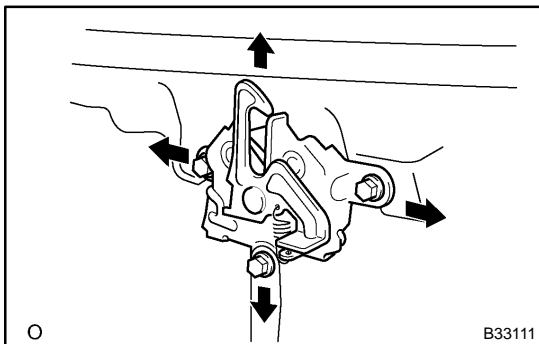

- (2) Adjust the hood lock position so that the striker can enter it smoothly.

- (3) Tighten the hood lock bolts after the adjustment.

Torque: 7.0 N·m (71 kgf·cm, 62 in·lbf)