


INSPECTION

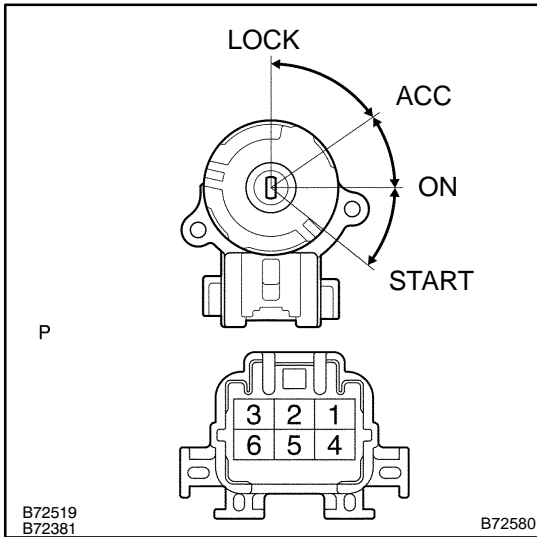

1. INSPECT IGNITION OR STARTER SWITCH ASSY

(a) Check the switch resistance.

Standard:

Tester Connection	Switch Condition	Specified Condition
1-3	ACC	Below 1Ω
1-2	ON	
1-3		
5-6		
1-2	START	
4-5		
5-6		

If the result is not as specified, replace the switch assy.