


IGNITION SWITCH OR STARTER SWITCH ASSY REPLACEMENT

8004V-01

HINT:

The installation procedures are the removal procedures in reverse order.

1. **REMOVE HORN BUTTON ASSY (See page 71-21)**
2. **REMOVE STEERING WHEEL ASSY (See page 71-21)**
3. **REMOVE STEERING COLUMN COVER (See page 71-21)**

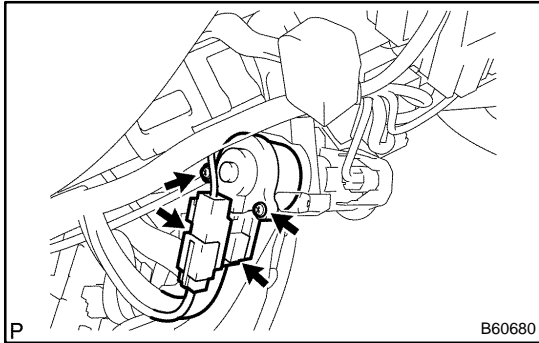

4. **REMOVE IGNITION OR STARTER SWITCH ASSY**
 - (a) Disconnect the ignition switch and unlock warning switch connectors.
 - (b) Remove the clamp.
 - (c) Remove the 2 screws and ignition switch.