DRIVE SHAFT / PROPELLER SHAFT

022T1–01

PREPARATION

SST

	09520–00031	Rear Axle Shaft Puller	FRONT AXLE HUB SUB–ASSY LH
	09520–01010	Drive Shaft Remover Attachment	FRONT DRIVE SHAFT
	09520–24010	Differential Side Gear Shaft Puller	FRONT DRIVE SHAFT
	(09520–32040)	Shocker Set	FRONT DRIVE SHAFT
	09521–24010	Rear Axle Shaft Puller	FRONT DRIVE SHAFT
	09527–10011	Rear Axle Shaft Bearing Remover	FRONT DRIVE SHAFT
	09527–17011	Rear Axle Shaft Bearing Remover	FRONT AXLE HUB SUB–ASSY LH
	09608–16042	Front Hub Bearing Adjusting Tool	FRONT DRIVE SHAFT
	(09608–02021)	Bolt & Nut	FRONT DRIVE SHAFT
	(09608–02041)	Retainer	FRONT DRIVE SHAFT
	09608–32010	Steering Knuckle Oil Seal Replacer	FRONT AXLE HUB SUB–ASSY LH
	09628–00011	Ball Joint Puller	FRONT DRIVE SHAFT FRONT AXLE HUB SUB–ASSY LH

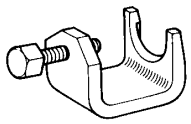	09628–10011	Ball Joint Puller	FRONT AXLE LH HUB BOLT REAR AXLE HUB BOLT
	09628–62011	Boll Joint Puller	FRONT DRIVE SHAFT FRONT AXLE HUB SUB–ASSY LH
	09930–00010	Drive Shaft Nut Chisel	FRONT DRIVE SHAFT FRONT AXLE HUB SUB–ASSY LH
	09950–00020	Bearing Remover	FRONT DRIVE SHAFT
	09950–40011	Puller B Set	FRONT AXLE HUB SUB–ASSY LH
	(09951–04020)	Hanger 200	FRONT AXLE HUB SUB–ASSY LH
	(09952–04010)	Slide Arm	FRONT AXLE HUB SUB–ASSY LH
	(09953–04020)	Center Bolt 150	FRONT AXLE HUB SUB–ASSY LH
	(09954–04010)	Arm 25	FRONT AXLE HUB SUB–ASSY LH
	(09955–04011)	Claw No.1	FRONT AXLE HUB SUB–ASSY LH
	(09957–04010)	Attachment	FRONT AXLE HUB SUB–ASSY LH
	(09958–04011)	Holder	FRONT AXLE HUB SUB–ASSY LH
	09950–60010	Replacer Set	FRONT AXLE HUB SUB–ASSY LH

	(09951–00370)	Replacer 37	FRONT AXLE HUB SUB–ASSY LH
	(09951–00600)	Replacer 60	FRONT AXLE HUB SUB–ASSY LH
	09950–60020	Replacer Set No.2	FRONT AXLE HUB SUB–ASSY LH
	(09951–00680)	Replacer 68	FRONT AXLE HUB SUB–ASSY LH
	09950–70010	Handle Set	FRONT AXLE HUB SUB–ASSY LH
	(09951–07100)	Handle 100	FRONT AXLE HUB SUB–ASSY LH

Recomended Tools

	09011–12301	Socket Wrench 30 mm	FRONT DRIVE SHAFT FRONT AXLE HUB SUB–ASSY LH
	09905–00012	Snap Ring No.1 Expander	FRONT DRIVE SHAFT
	09905–00013	Snap Ring Pliers	FRONT AXLE HUB SUB–ASSY LH
	(09904–00090)	Claw Set	FRONT AXLE HUB SUB–ASSY LH

Equipment

Torque wrench	
Dial indicator with magnetic base	

Lubricant

Item		Capacity
Front drive shaft	Outboard joint grease:	155 to 170 g (5.5 to 6.1 oz.)
	Inboard joint grease:	125 to 135 g (4.5 to 4.8 oz.)