05DJM–01

LIST OF DISABLE A MONITOR

HINT:

This table indicates ECM monitoring status for the items in the upper columns if the DTCs in each line on the left are being set.

Monitor disablement (X - disabled)

Fault code	Fault code	Component/ system	P0010,P0020	P0011	P0012	P0016,P0018	P0021	P0022	P0030,50	P0135,P0155	P0036,56	P0043,44,63,64	P0100-P0103	P0101	P0105-P0108	P0106	P0110	P0115-P0118	P0116	P0120,P0223,P2135	P0125	P0128	P0130-P0153	P0134,P0154	P0136,P0156	P0142,P0162	P0171,P0172	P0300-P0308	P0325-P0333	P0335	P0340,P0341	P0340-P0346	P0351-P0358	P0385	P0401	P0402	P0405,P0406	P0409	P0420,P0430	P0442-P0456	P0450,P0451
P0010,P0020	P0010,P0020	VVT VSV1,2	▨																			×					×													
P0011	P0011	VVT System1-Advance		▨		×		×														×					×								×	×			×	×
P0012	P0012	VVT System1 - Retard			▨	×		×														×					×								×	×			×	×
P0016,P0018	P0016,P0018	VVT System - Misalignment				▨																																		
P0021	P0021	VVT System2 - Advance			×	×	▨															×					×								×	×			×	×
P0022	P0022	VVT System2 - Retard			×	×		▨														×					×								×	×			×	×
P0030,50	P0031,32,51,52	O2 Sensor Heater - Sensor1							▨													×	×	×	×	×	×								×	×			×	
P0135,P0155	P0031,32,51,52	A/F Sensor Heater - Sensor1								▨												×			×	×	×								×	×			×	
P0036,56	P0037,38,57,58	O2 Sensor Heater - Sensor2									▨														×	×													×	
P0043,44,63,64	P0043,44,63,64	O2 Sensor Heater - Sensor3										▨														×														
P0100-P0101	P0100-P0103	MAF sensor		×	×		×	×					▨	▨					×		×	×	×	×	×	×	×	×							×	×			×	×
P0105-P0106	P0105-P0108	MAP sensor		×	×		×	×						▨	▨	▨			×		×	×	×	×	×	×	×	×							×	×			×	×
P0110	P0110-P0113	IAT sensor														▨	▨				×	×	×	×	×	×	×								×	×				×
P0115,P0116	P0115-P0118	ECT sensor		×	×	×	×	×						×		×		▨	▨		×	×	×	×	×	×									×	×		×	×	×
P0120,P0121	P0120-P0223,P2135	TP sensor												×		×				▨			×	×	×	×	×								×	×			×	×
P0125	P0125	Insufficient ECT for Closed Loop		×	×		×	×						×		×					▨	×	×	×	×	×	×								×	×		×	×	×
P0128	P0128	Thermostat																				▨																		
P0130-P0153	P0130-P0153	O2 Sensor - Sensor1																				×	▨	×	×	×									×	×			×	
P0134,P0154	P0134,P0154	O2 Sensor,A/F Sensor(No Activity) - Sensor1								×												×	×	▨	×	×									×	×			×	×
P0136,P0156	P0136,P0156	O2 Sensor - Sensor2																							▨														×	
P0142,P0162	P0142,P0162	O2 Sensor - Sensor3																								▨														
P0171,P0172	P0171,P0172	Fuel system																				×	×	×	×	×	▨								×	×			×	×
P0300-P0308	P0300-P0308	Misfire							▨													×	×	×	×	×		▨							×	×			×	×
P0325,P0330	P0325-P0333	Knock sensor																											▨						×	×				
P0335	P0335	CKP sensor		×	×		×	×						×		×						×	×	×	×	×	×			▨					×	×			×	×
P0340,P0341	P0340,P0341	CMP sensor		×	×		×	×						×		×						×	×	×	×	×	×				▨				×	×			×	×
P0340-P0346	P0340-P0346	VVT sensor1,2																				×										▨								
P0351-P0358	P0351-P0358	Ignitor		×	×		×	×														×					×						▨		×	×			×	×
P0385	P0385	CKP sensor2												×		×						×	×	×	×	×	×							▨	×	×			×	×
P0401	P0401	EGR system(closed)																				×					×								▨				×	
P0402	P0402	EGR system(open)																				×	×	×	×	×	×									▨			×	×
P0405,P0406	P0405-P0409	Lift sensor																																			▨			
P0409	P0409	EGR Lift sensor																																				▨		
P0420,P0430	P0420,P0430	Catalyst																																					▨	
P0442-P0456	P0442-P0456	EVAP system																					×	×	×	×														▨	
P0450,P0451	P0450-P0453	EVAP press sensor																																							▨
P0500	P0500	VSS																				×	×	×	×	×	×								×	×			×	×
P0511	P0511	IAC valve																					×																	
P0510	P0510	Idle switch												×		×						×	×		×	×	×	×								×			×	×
P0560	P0560	System Voltage																																						
P0617	P0617	Starter signal																																						
P0705	P0705	Shift lever position switch																																						
P0710	P0710-P0713	Trans fluid temp sensor																																						
P0720-P0793	P0720-P0793	Output speed sensor																																						
P0715-P0717	P0715-P0717	Input speed sensor																																						
P0724	P0724	Stop lamp switch																																						
P0741-P0796	P0741-P0796	Trans solenoid (function)																																						
P0748-P0798	P0748-P0799	Trans solenoid (range)																																						
P0850	P0850	PNP switch																										▨												
P1010,P1020	P1010,P1020	VVTL																				×					▨												
P1011,12(,21,22)	P1011,12(,21,22)	VVTL system1(,2)																				×					▨								×	×			×	×
P1126	P1126	Electronic magnet clutch																																						
P1129	P1129	Electronic throttle system																																						
P1430	P1430	HC adsorber ACT press sensor																																						▨
P2004,6	P2004,6	Intake Manifold Runner Control																																						
P2009,10	P2009,10	Intake Manifold Runner Control Circuit																																						
P2014,16,17	P2014,16,17	Intake Manifold Runner Position Sensor																																						
P2102,P2103	P2102,P2103	Throttle motor																																						
P2120-P2138	P2120-P2138	Accel position sensor																																						
P2196,P2198	P2196,P2198	A/F sensor(rationality)																				×			×	×									×	×			×	
P2226	P2226	BARO sensor																					×		×	×														
P2237,P2240	P2237,P2240	A/F sensor(open)																				×			×	×									×	×			×	
P2423,24	P2423,24	HC Absorption Catalyst																																						
P2430,2,3	P2430,2,3	AIR Pressure Sensor(Low/High)																																						
P2431	P2431	AIR Pressure Sensor(Rationality)																																						
P2440	P2440	AIR control valve stuck open																					×	×	×	×									×	×			×	
P2441	P2441	AIR control valve stuck close																					×	×	×	×									×	×			×	
P2444	P2444	AIP stuck On																					×	×	×	×									×	×			×	
P2445	P2445	AIP stuck Off																					×	×	×	×									×	×			×	
P2714-P2759	P2714-P2759	Trans solenoid(SLU-SLD)																																						
P2A00,P2A03	P2A00,P2A03	A/F Sensor (Slow response)																				×			×	×									×	×			×	

Monitor detected malfunction

T D13537

D13539

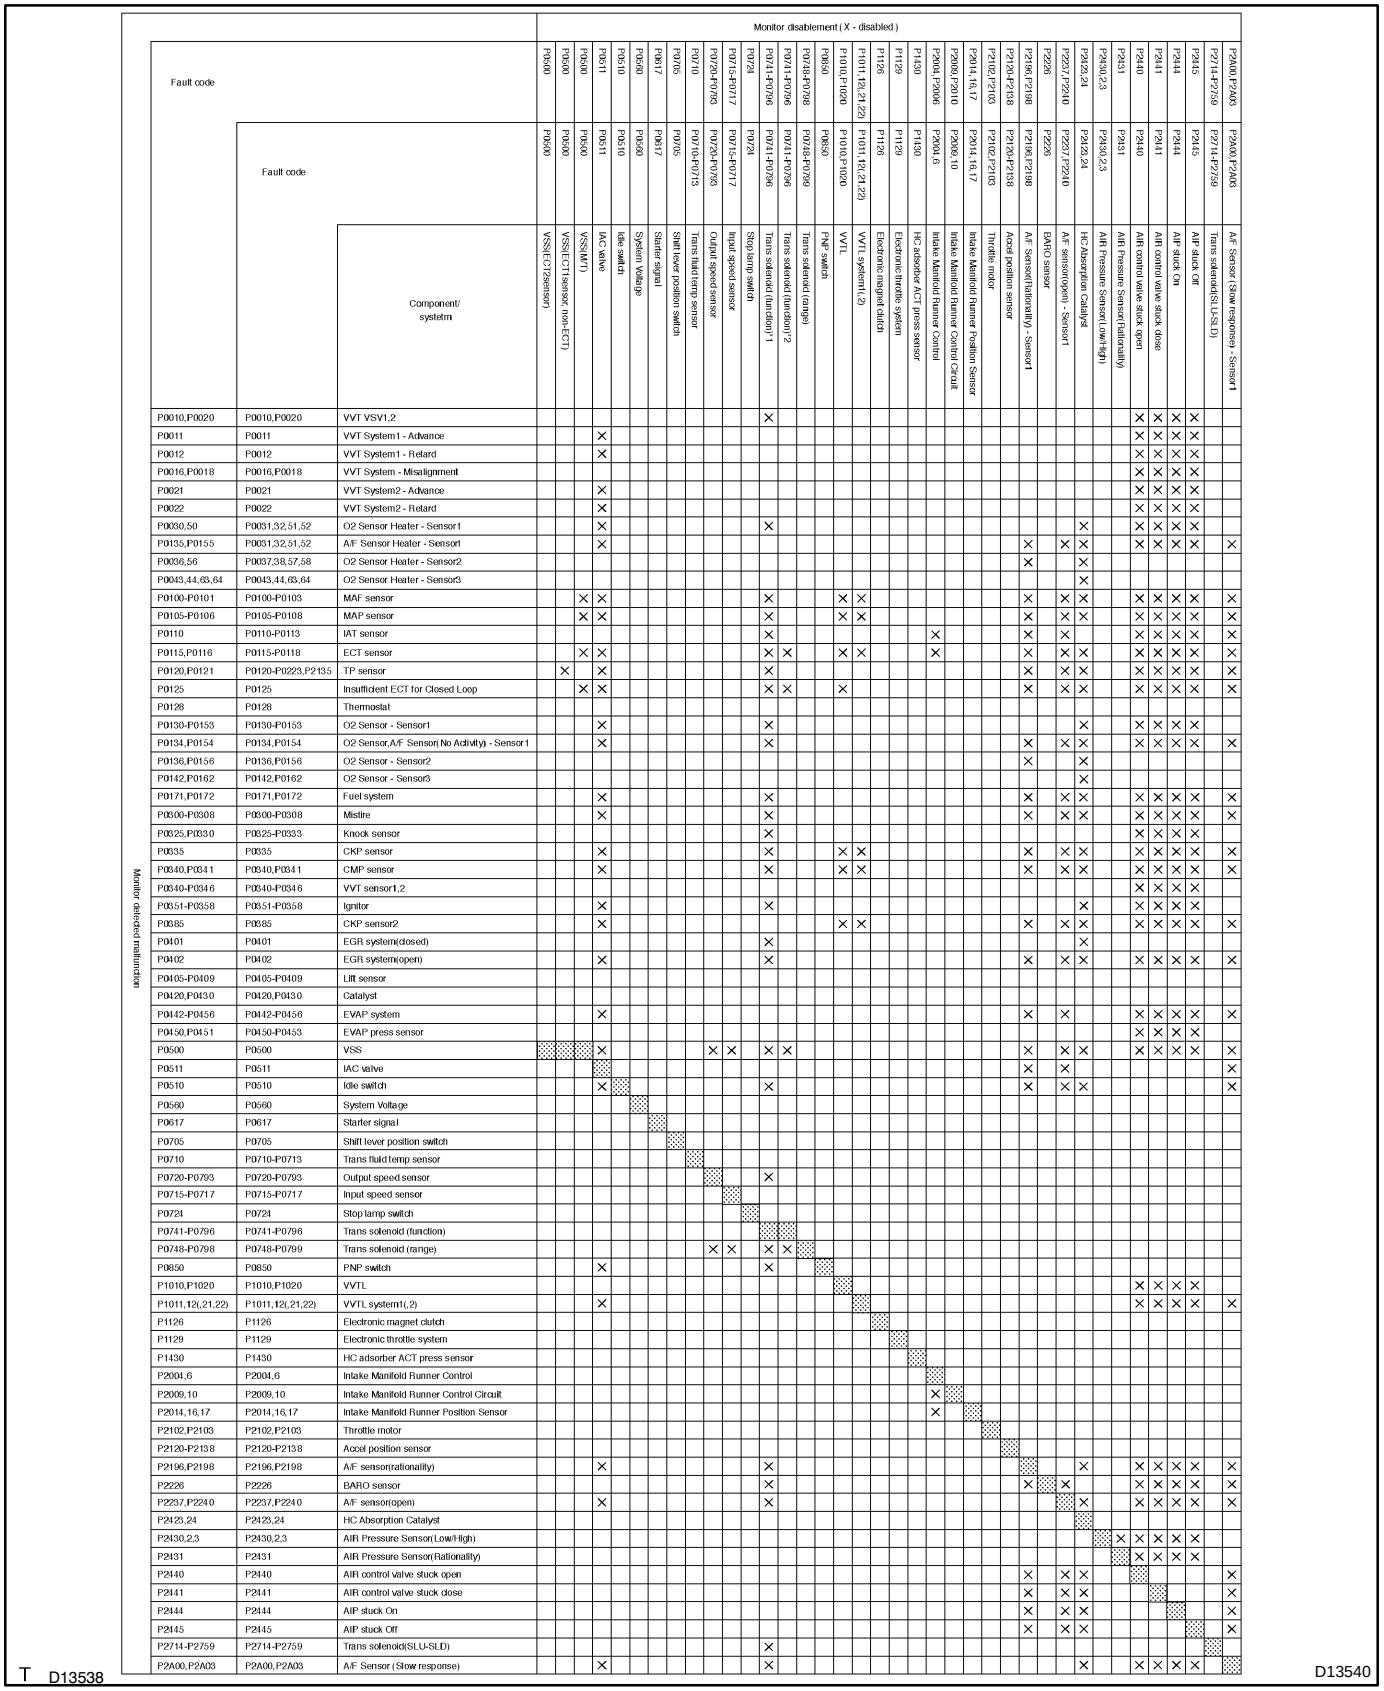

Note *1: Without input speed sensor

Note *2: With input speed sensor