


REAR WIPER MOTOR ASSY


660DX-01

REPLACEMENT


1. REMOVE BACK DOOR TRIM BOARD (See page 75-33)
2. REMOVE REAR WIPER ARM COVER
3. REMOVE RR WIPER ARM & BLADE ASSY
4. REMOVE REAR WIPER MOTOR GROMMET

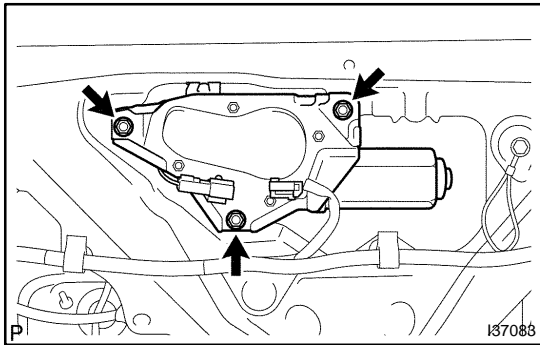

5. REMOVE REAR WIPER MOTOR ASSY
 - (a) Disconnect the connector.
 - (b) Remove the 3 bolts and rear wiper motor assy.

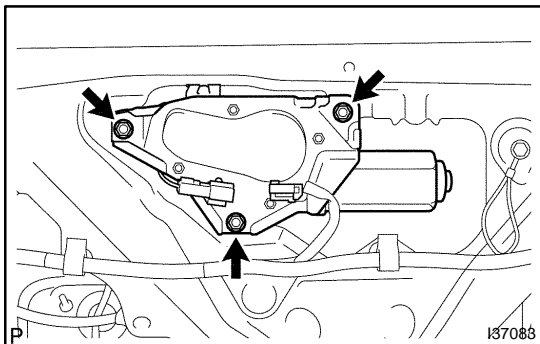


6. INSTALL REAR WIPER MOTOR ASSY
 - (a) Install the rear wiper motor assy with the 3 bolts.
Torque: 5.4 N·m (55kgf·cm, 47 in·lbf)
 - (b) Connect the connector.

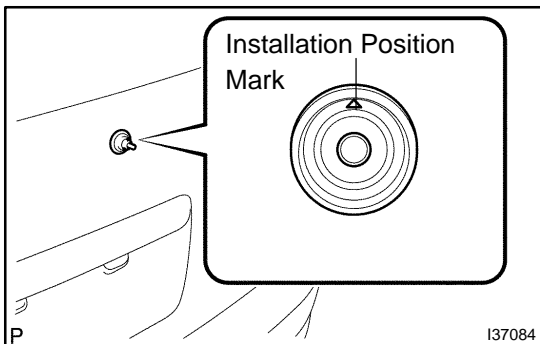


7. INSTALL REAR WIPER MOTOR GROMMET
 - (a) Install the rear wiper motor grommet as shown in the illustration.

8. INSTALL RR WIPER ARM & BLADE ASSY
 - (a) Operate the wiper, and stop the windshield wiper motor assy in the automatic stop position.

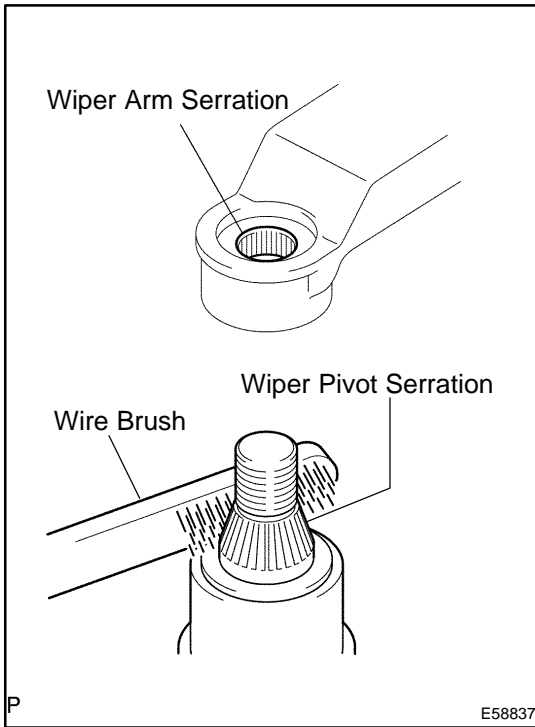

- (b) Scrape off the serration part of the wiper arm with a round file or equivalent.
- (c) Clean the wiper pivot serration with a wiper brush.

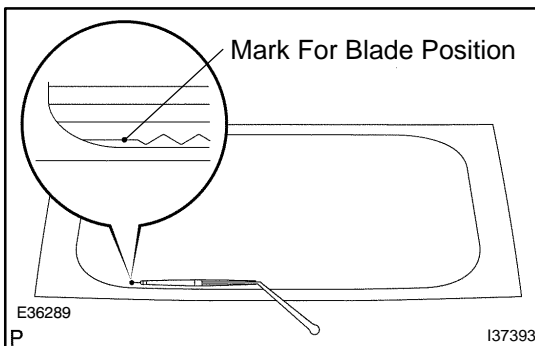

- (d) Install the RR wiper arm & blade assy with the nut in the position as shown in the illustration.
Torque: 5.4 N·m (55kgf·cm, 47 in·lbf)

HINT:

Hold the arm hinge by hand to fasten the nut.

- (e) Operate the wiper while running water or washer fluid over the window, and check the wiping condition and that the rear wiper does not hit against the vehicle's body.